INSTALLATION INSTRUCTIONS



TUBE WALL MOUNT MIXER | TU1700





IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:



RECOMMENDATIONS FOR INSTALLATION



ATTENTION: Failure to follow these recommendations may void the warranty.

It is recommended that a qualified, licensed tradesperson install this product.










Water Pressure: 3 bar

Product performance cannot be guaranteed if pressure is less than 1 bar. Above 5 bar a pressure regulator must be installed. Failure to do so voids the product warranty.

Water Temperature: 45°-65°C

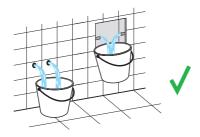


Pre-Flush


Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.



BEFORE WALL LINING


- - Min Max
- 2 Connect the hot & cold water inlet pipes.
- 3 Fasten the mixer body to sufficent framing, ensuring that it is level.
 - A Pressure test the unit before wall lining.

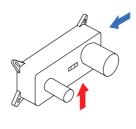


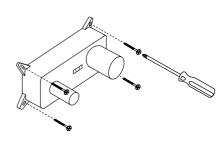


AFTER WALL LINING


- 4 Cut the protective sleeves back to the finished wall lining and remove the plastic bung.
- 5 Install the spigot, flanges, handle & spout. It is recommended to apply a small bead of silicone behind the faceplate to prevent water entering the wall cavity.
- 6 Test for performance

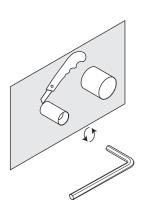

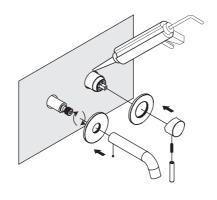

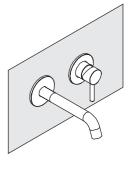


CLEANING & MAINTENANCE

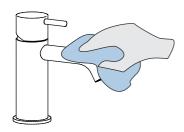

Cleaning

Clean with warm soapy water and a smooth cloth. Avoid abrasive sponges or detergents as these will damage the finish.

 To preserve the finish it is recommend to apply a stainless steel oil/mineral oil on a monthly basis.




Aerator Maintenance

Remove the aerator, either with a spanner or an aerator cartridge key.

Immerse for half a day in water-vinegar solution (80-20%).

 Wash, then reassemble.



Cartridge Replacement


Before you start, turn off the water supply to the mixer.

- 1. Remove the handle
- 2. Unscrew the dome (hand tightened)
- 3. Unscrew the locking nut
- 4. Remove the cartridge

Re-assemble in reverse order



⚠ Max tightening torque on locking nut: 10-12 Nm

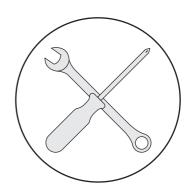

Warranty Information

For full details about our warranty visit plumbline.co.nz/warranty-information