
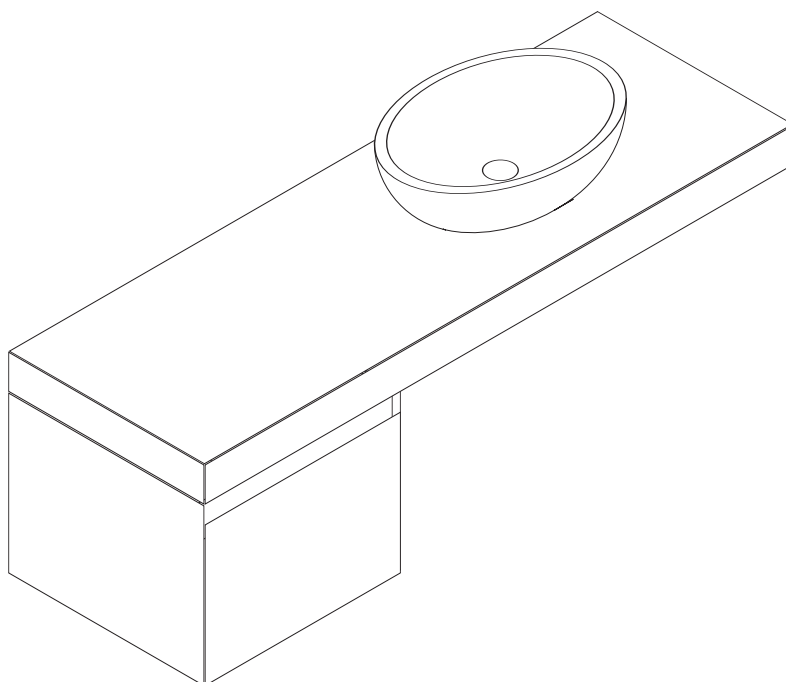


# INSTALLATION INSTRUCTIONS

STANZA CASA SLAB TOPS

progetto  
DESIGN COLLECTION

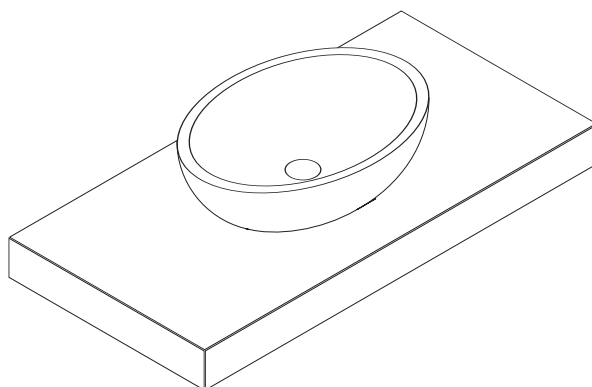

**IMPORTANT!**

Please read these instructions prior to installation

Distributed by:

**Plumblīne**

T 04 568 9898 E sales@plumblīne.co.nz  
www.plumblīne.co.nz

Progetto Bathroom Furniture products are manufactured from the finest materials and when treated with care will last many years.

Materials used are water resistant and not waterproof. All spillage or leakage of water that may come in contact with the unit should be carefully dried immediately as water damage is not a justifiable claim. Keep heat away from the cabinet and avoid metal or sharp objects which could scratch and damage the surface.

Clean the cabinet with a soft damp cloth and a liquid household cleaner and dry off all surfaces after cleaning. Abrasive cleaners should never be used.

---

## General Installation Instructions


It is recommended that a qualified, licensed tradesperson install your unit. This unit carries a full warranty against faulty workmanship and material. Prior to installation it is important to inspect the unit to ensure no defects or no damage has occurred in transit as the warranty does not cover the cost of removal and installation once installed. The warranty will be null and void if damage occurred after installation.

Ensure the wall is straight as a bowed wall will twist and distort the vanity top. Decide the appropriate height for the top of the unit, bearing in mind that the normal height is between 840 and 900mm to the top of your chosen basin. Deduct the thickness of the basin and this becomes the fixing height to the top of the vanity top. Install the required wall brackets as described in the following pages. Position unit, check top is sitting level and square and fasten to wall. Do not tile down onto vanity top or into side of vanity top, top should be installed onto finished wall covering.

A bead of sealant must be used to seal all edges where water penetration may occur - between cabinet and wall and between cabinet and floor. The warranty will be null and void if damage occurred after installation.

---

## Rear Fixing Cut Out Positions

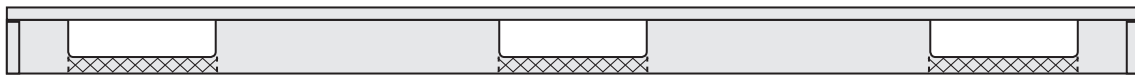

Rear fixing cut out positions are given for optional positioning of wall brackets.


Should these cut out positions not suit, the installer can cut out new positions to suit.

For installation of Stanza Top with wall brackets the cross hatched section of timber (as shown above) will need to be cut out to suit where brackets are being installed. This timber under the fixing cut out position is only left there for strength when not using the Stanza wall bracket


**Please note:** positions are approximate only and could be subject to change

---


## Tools Required For Installation

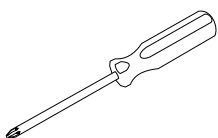


Screwdriver

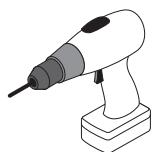


Drill & 5mm Drill Bit

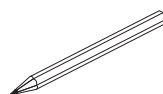

Pencil

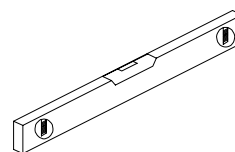

Level

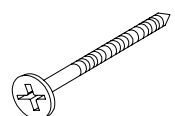


75mm Screws


1. **⚠ Important!** Before installing ensure there is sufficient timber framing in the wall to securely fasten your vanity to.

Recommended required fixing is 45x90mm framing for each corner of the drawer units, and double 45x90mm framing for each wall bracket required, see both illustrations below.

We recommend these brackets are installed prior to the wall lining.

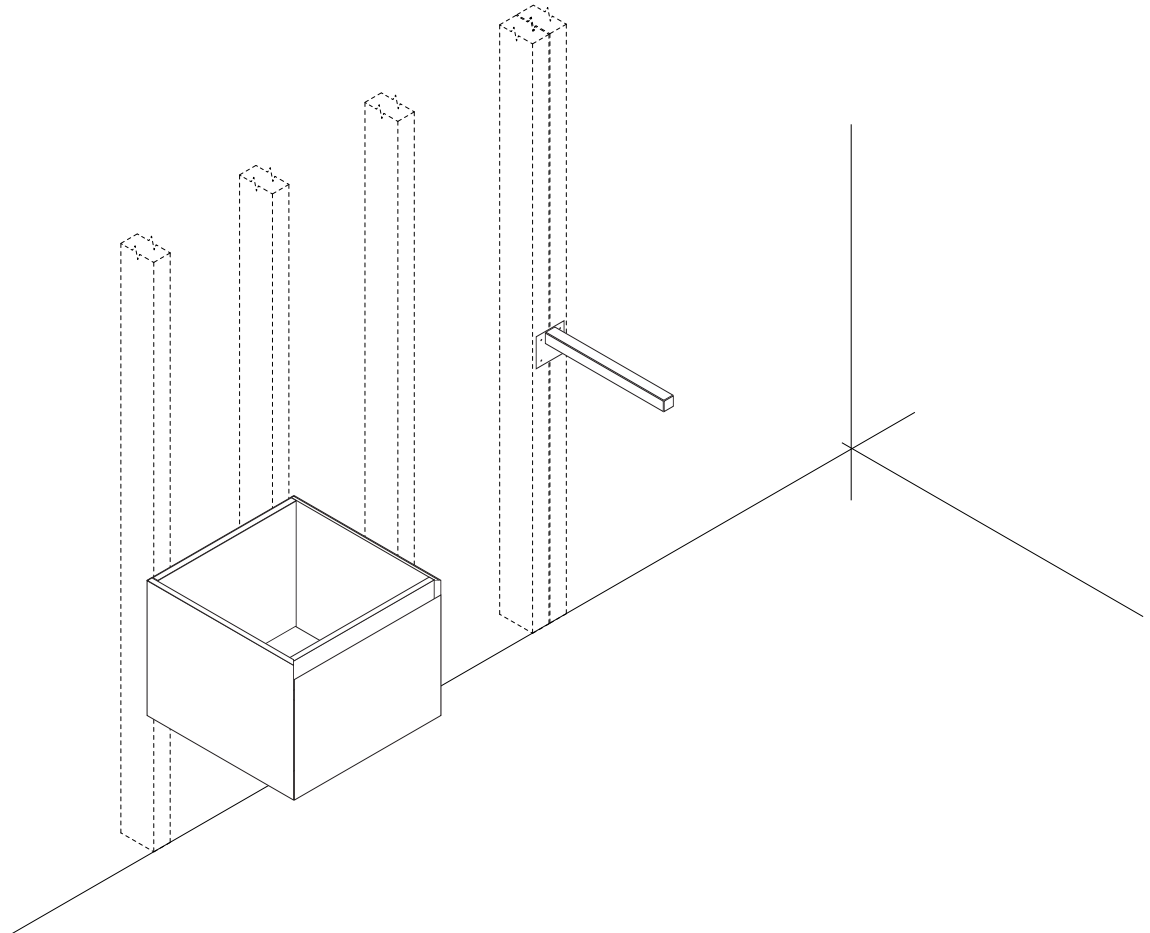


2. Decide desired finished bench top height from the floor, this will be 'A'. Measure complete bench top thickness. This will be 'B'. Measure top board only. This will be 'C'.

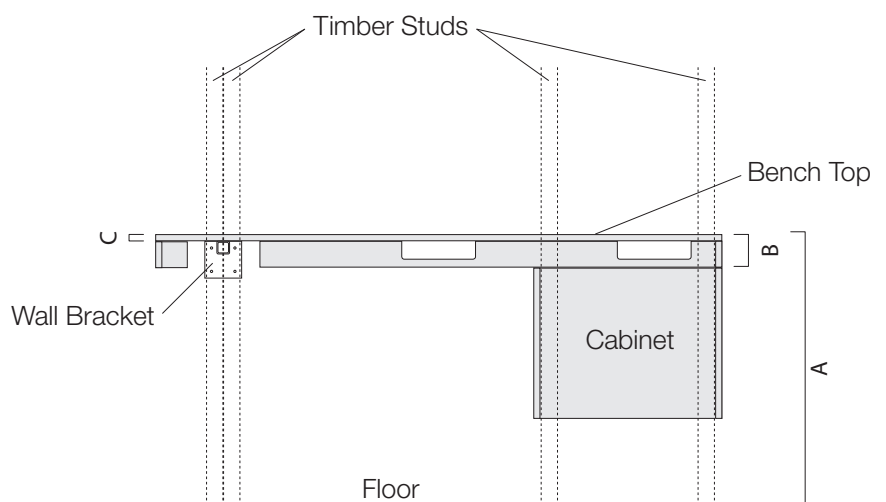


### 3. Install the Drawer Unit

Using adequate length Tek screws, attach the cabinet/drawer set to the wall at desired position, at a height measuring 'A' minus 'B' to the top of the cabinet/drawer set.

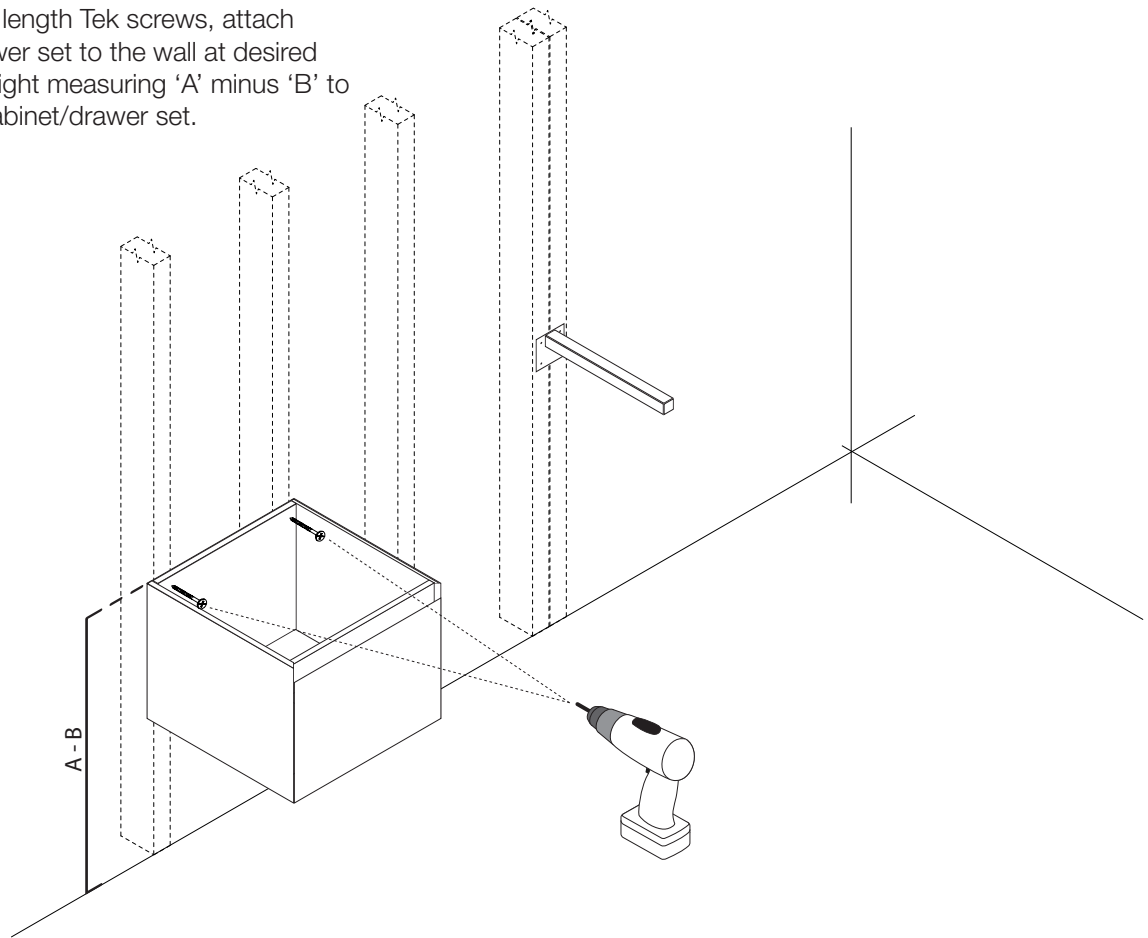


### 4. Install the Wall Bracket/s


Using adequate length Tek screws, attach the bracket to the wall (insuring into solid framing) at a height measuring 'A' minus 'C' to the top of the wall bracket. Note; holes in back of top are slotted to aid with wall bracket placement.

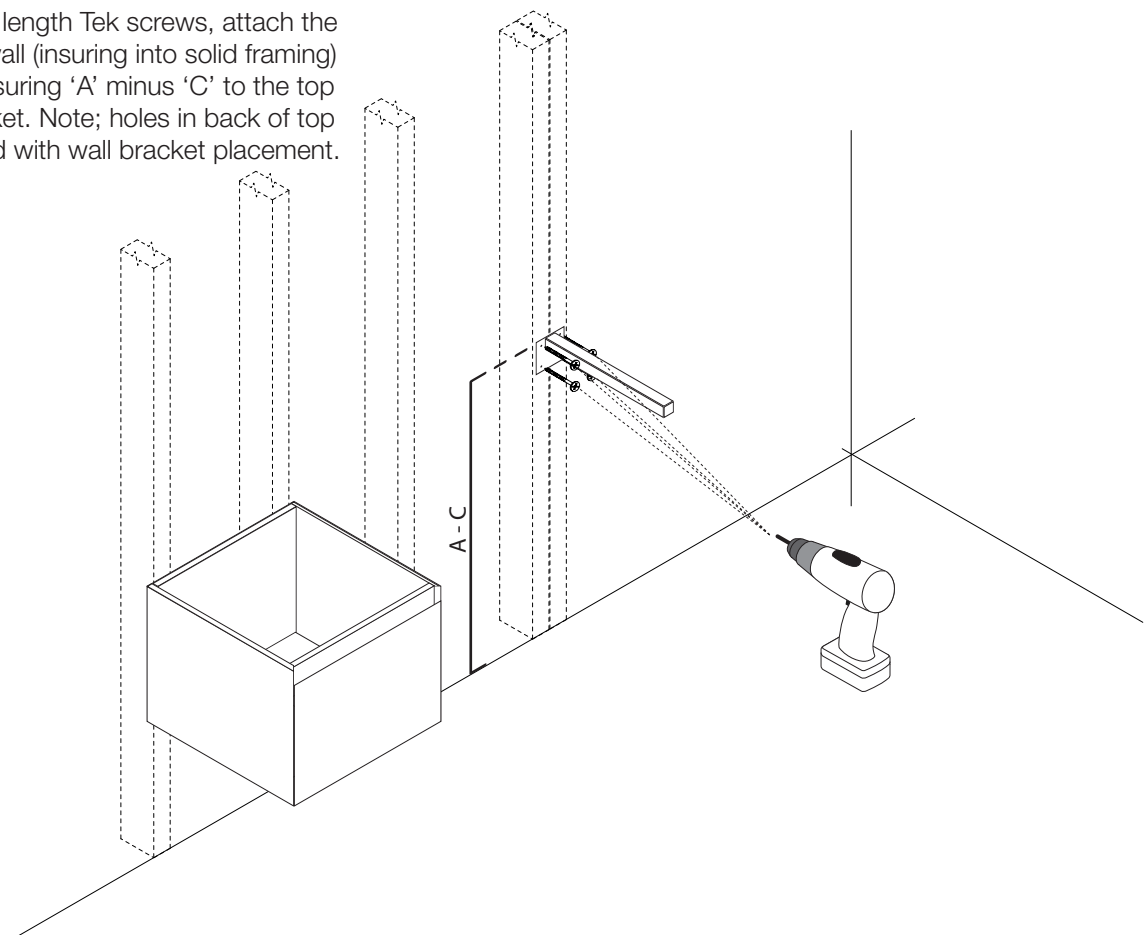


5. Place the slab top onto the wall bracket and cabinet that is fixed to the wall.

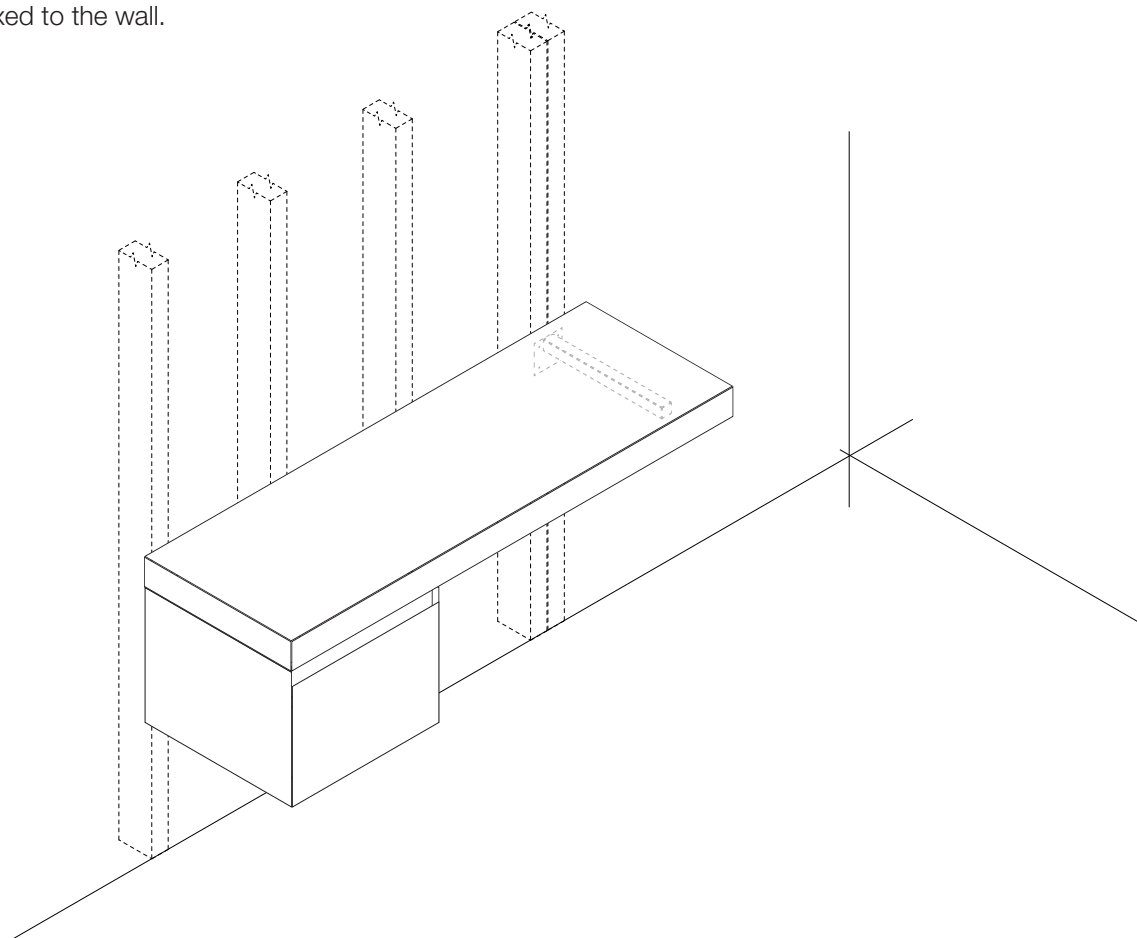

6. Use a level to check top in both lateral directions. If top needs levelling, use adjustment grub screw integrated in wall bracket and/or packers if needed.


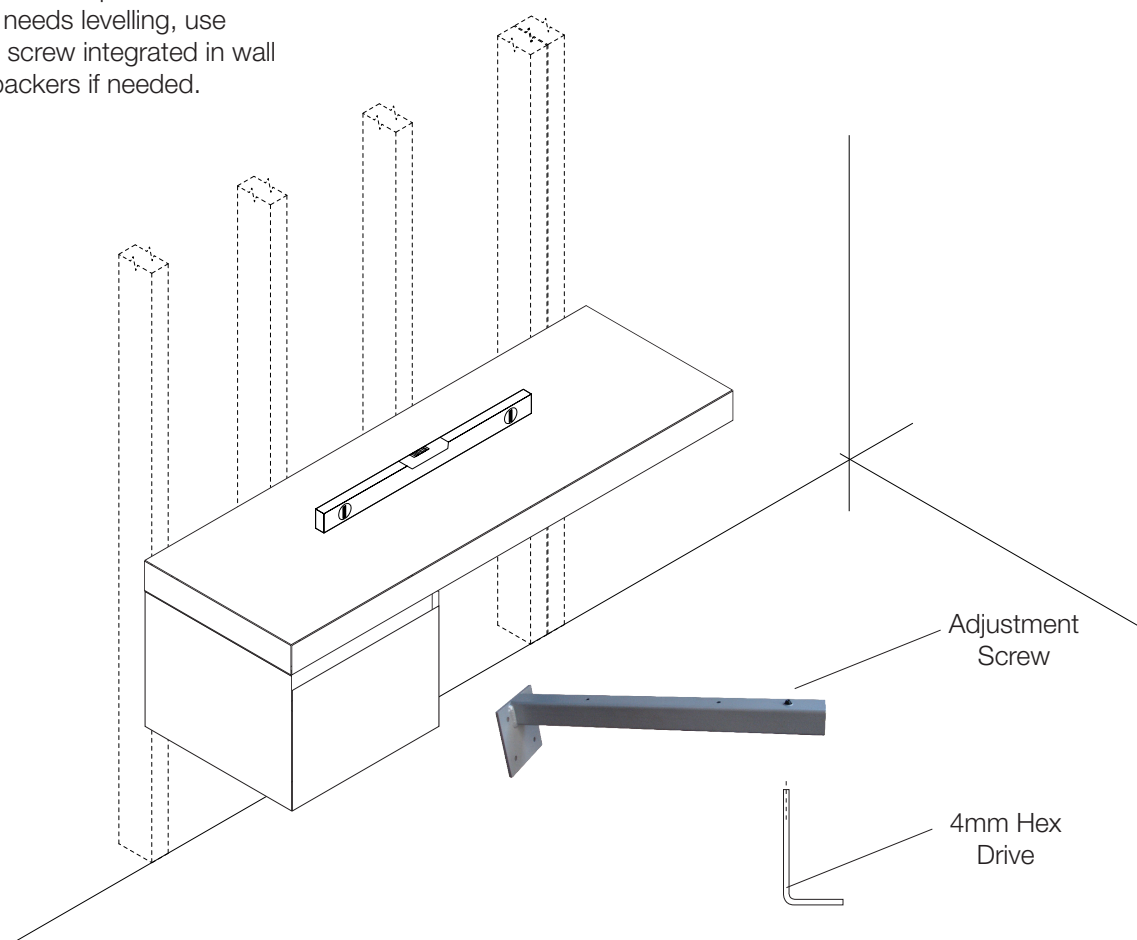


7. Use self tapping screws to fasten the slab top onto the wall to hold the top in place.

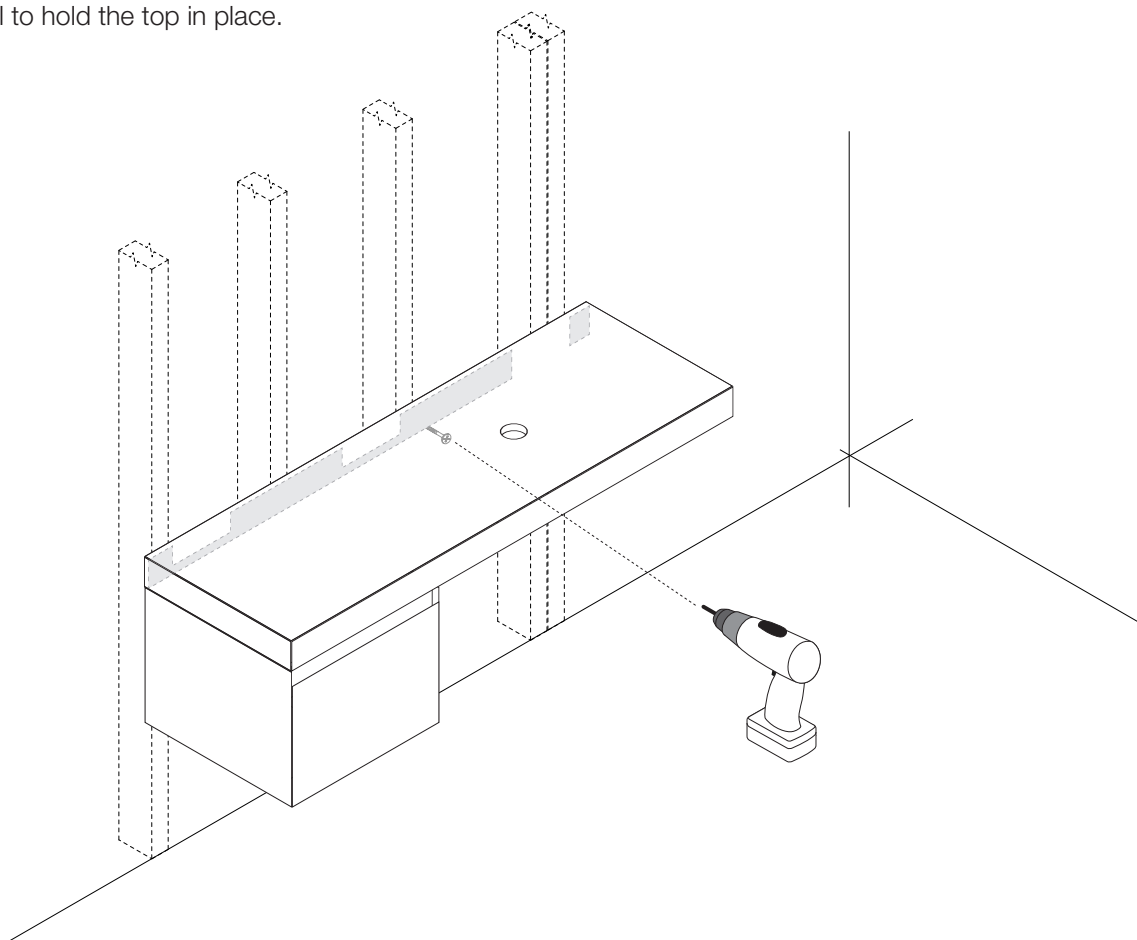

8. Optional - Measure and drill 35mm hole into top if needed for bench mounted basin waste. Consult your plumber for regulation regarding this step.

If you are installing a slab top without a cabinet underneath, use the same process but without Step 3.

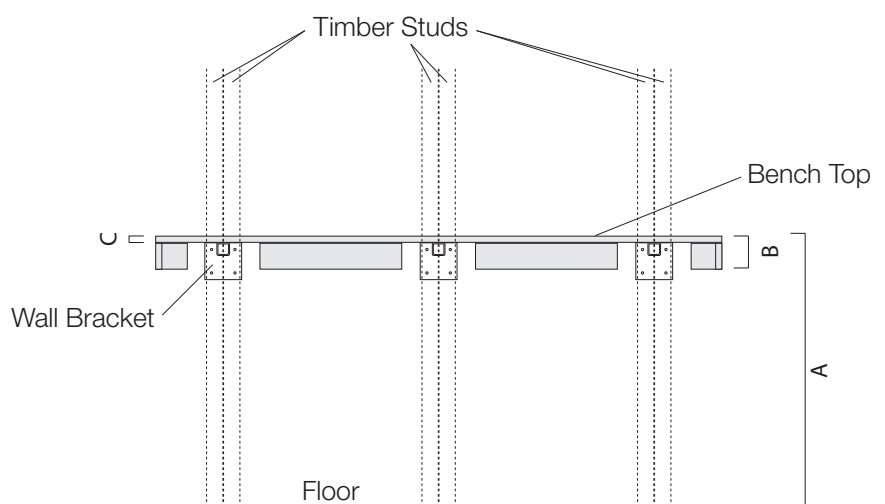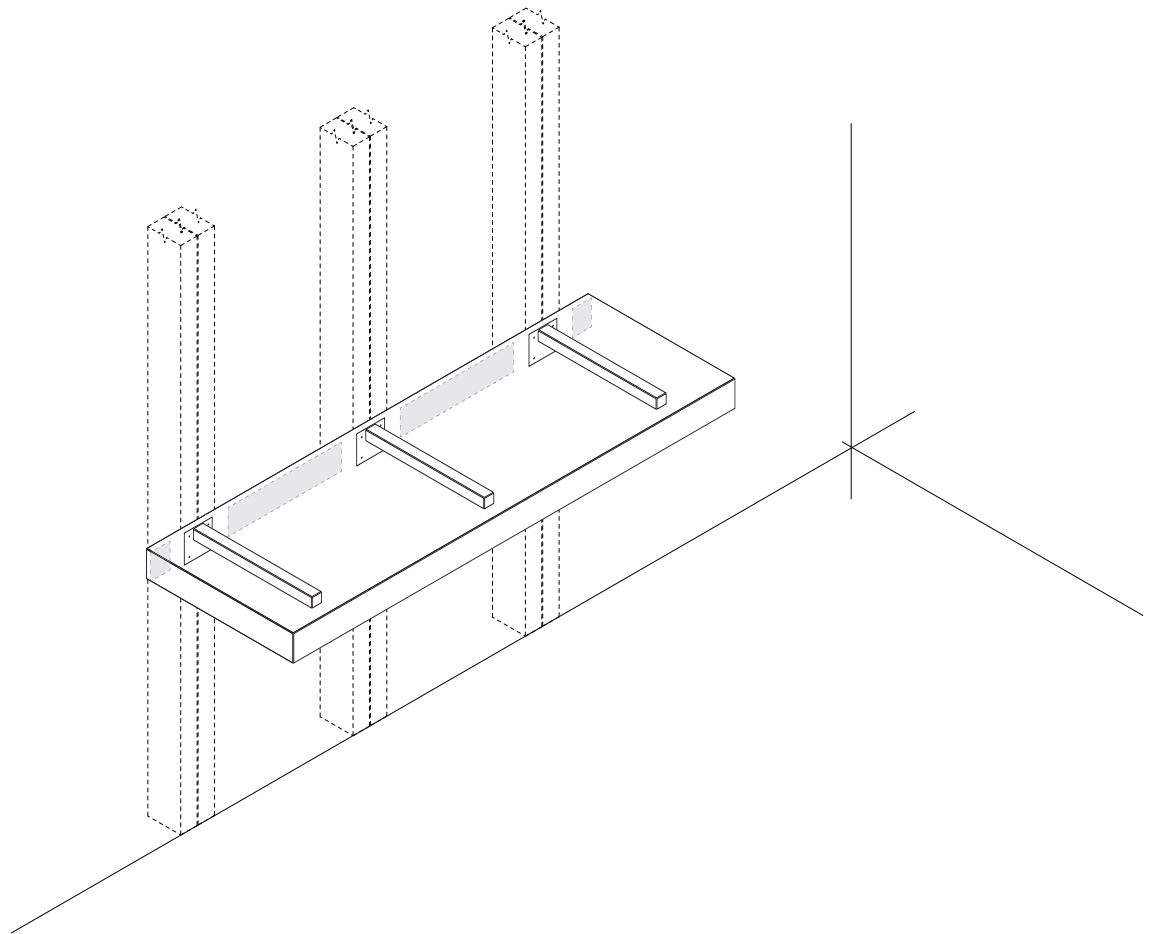

Progetto Bathroom Furniture products carry a seven (7) year warranty from date of purchase. Proof of purchase needs to be supplied by the purchaser when making a claim.

Plumblin (the NZ distributor for Progetto) warrants that in the manufacture of its products only high quality workmanship and materials have been used. If within the warranty period there should be a fault with either materials or workmanship Plumblin will either (at its sole discretion) repair or replace the faulty product, but will not be responsible for removal and installation costs.

This warranty does not cover damage by improper installation, abuse, accident, excessive wear and tear, improper care and maintenance, natural causes (sunlight and water), water temperatures above 55°C, humidity and over environmental conditions.

**IMPORTANT NOTE: Under no circumstances tile vanity cabinets and/or tops 'into' the wall.**

Progetto vanity cabinets & tops must be fitted to finished wall coverings. The Warranty does not cover any vanity and/or top that has been tiled 'into' a wall i.e., fitting or fixing a vanity to a wall and tiling into the side and around it, and/or tiling down and/or around the vanity top.

For full details about our warranty visit [plumblin.co.nz/warranty-information](http://plumblin.co.nz/warranty-information)