


INSTALLATION INSTRUCTIONS

VANITIES, MIRROR CABINETS & WALL TOWERS

progetto
DESIGN COLLECTION

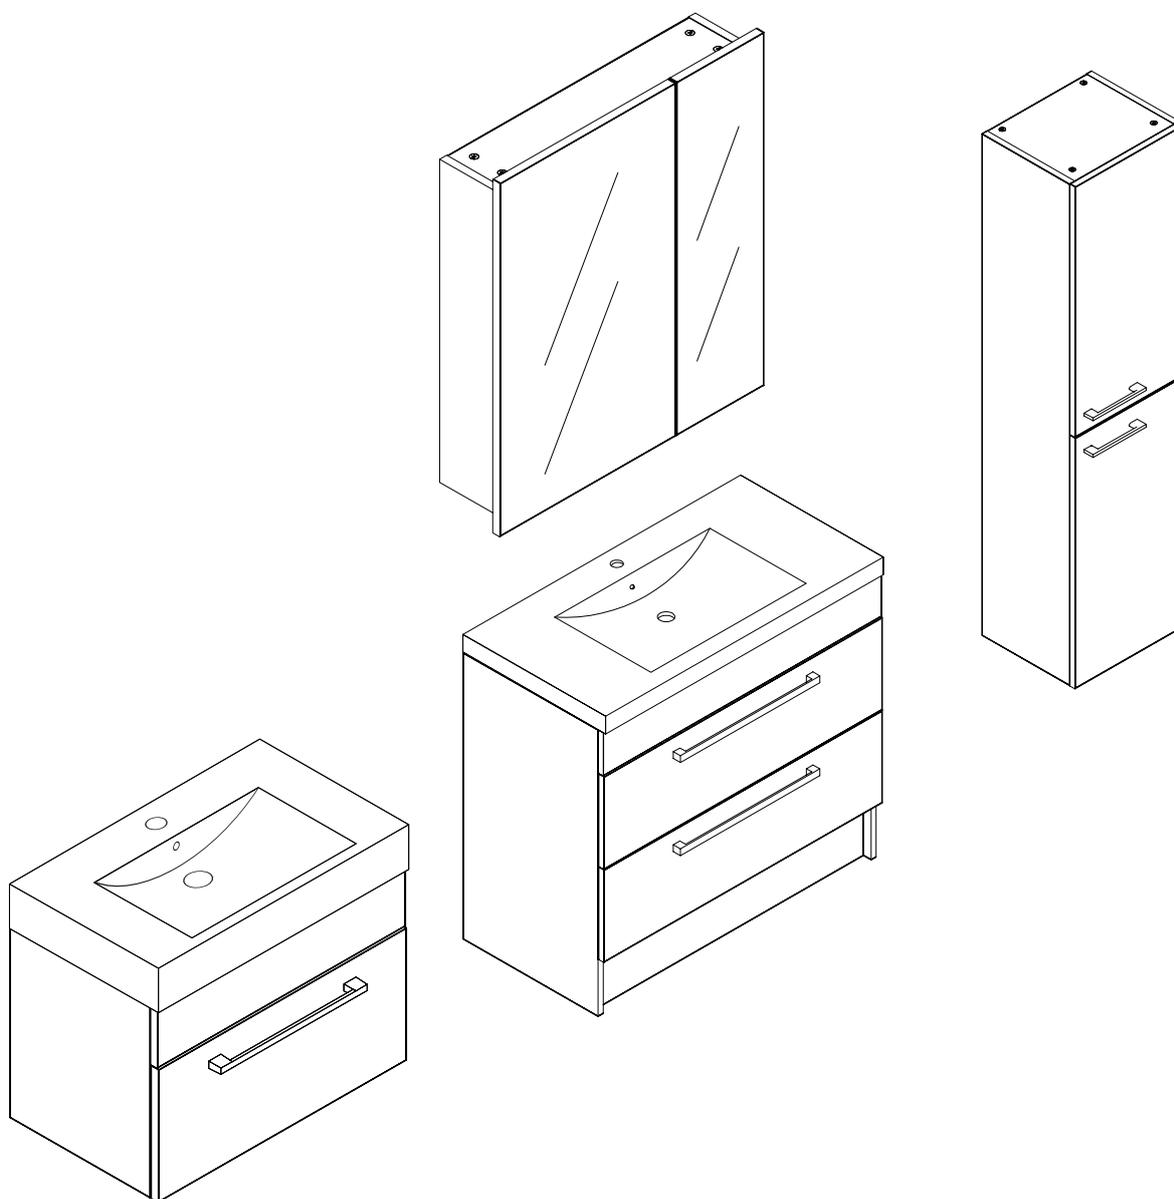

IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:

Plumbline

T 04 568 9898 E sales@plumblin.e.co.nz
www.plumblin.e.co.nz

Progetto Bathroom Furniture products are manufactured from the finest materials and when treated with care will last many years.

Vanity Tops

Vanity tops must not be subjected to water temperatures above the recommended safety level of 55° Celsius. Clean your vanity top with a damp cloth and a non-abrasive liquid cleaner. Stubborn stains and scratches can be removed with a light application of Brasso or a similar cutting compound. Avoid abrasive cleaners, solvents, heat and sharp objects. The use of cleaners incorporating ingredients which have been identified as harmful effects on acrylic will void the warranty.

Vanity Cabinets

Materials used are water resistant and not waterproof. All spillage or leakage of water that may come in contact with the unit should be carefully dried immediately as water damage is not a justifiable claim. Keep heat away from the cabinet and avoid metal or sharp objects which could scratch and damage the surface.

Clean the cabinet with a soft damp cloth and a liquid household cleaner and dry off all surfaces after cleaning. Abrasive cleaners should never be used.

Warm soapy water is the best cleaning product for most cabinetry products including melamine and thermoform. However the eraser sponges, or a melamine sponge are very effective on many matt surfaces including the Serica thermoform range. This sponge will help light scratches, stains, and soap scum disappear easily.

Add water to activate the surface of the sponge making it ready to wipe away marks. The sponge is reusable; however, it does begin to wear away with repeated uses.

*The sponge is **not recommended** on highly glossy or satin finishes or for wood finished surfaces, as it can strip away the surface and cause damage. **This sponge is purely designed for matt finishes.***

Eraser/Melamine Sponge General Directions:

1. Rinse under tap water and squeeze out excess water.
2. Using either side of pad, wipe away marks and stains using moderate pressure.
3. Wipe any excess water away with a microfibre cloth
4. Rinse pad after use.
5. Discard pad after multiple uses when white foam has worn away.

Where can I find an Eraser/Melamine Sponge?

- Bunnings - Glitz Wipe Out
- Countdown - Filta Good Cleaning sponge

⚠ Warning! Test in an inconspicuous area using light pressure before use. Wet the sponge before use. This helps cleaning performance and increases the durability of the sponge. Chemicals are not recommended or needed for use with this pad, however most chemicals will not affect the performance or appearance of the pad. The pad will not remove all marks, especially on non-porous surfaces. It will also not remove deep scratches if the vinyl itself has been cut right through. Only light abrasions and scuffs can be removed using this product.

It is recommended that a qualified, licensed tradesperson install your unit. This unit carries a full warranty against faulty workmanship and material. Prior to installation it is important to inspect the unit to ensure no defects or no damage has occurred in transit as the warranty does not cover the cost of removal and installation once installed. The warranty will be null and void if damage occurred after installation.

Vanity Tops

During the manufacture of ceramic tops they shrink significantly and this can result in the product being slightly uneven. It is recommended that the ceramic top be fixed onto the cabinet with silicone applied to the top edges of the cabinet. All vanity tops should also have a bead of silicone applied between the rear upstand or back edge and the wall. Do not tile down onto vanity top, fix vanity and vanity top to finished wall covering.

Cabinets

- Floor standing


Ensure the floor is level or the vanity is packed under the base to make the vanity level. Ensure the wall is straight. Drill holes for pipes in base or rear of unit with appropriate size hole saw. Position unit, check cabinet is level and square and fasten to wall. Do not tile down onto vanity top or into side of vanity unit, vanity should be installed onto finished wall covering.

- Wall hung

Ensure the wall is straight as a bowed wall will twist the cabinet and distort the door alignment. Decide the appropriate height for the top of the unit, normally between 840 and 900mm. Deduct the thickness of the vanity top/basin and this becomes the fixing height to the top of the vanity cabinet. Drill holes for the pipes in rear of unit and base with appropriate size hole saw. Position unit, check cabinet is sitting level and square and fasten to wall. Fastenings should be into solid timber and be within 50mm of each side. Do not tile down onto vanity top or into side of vanity unit, vanity should be installed onto finished wall covering.

A bead of sealant must be used to seal all edges where water penetration may occur - between cabinet and wall and between cabinet and floor. The warranty will be null and void if damage occurs after installation.


Tools Required For Installation

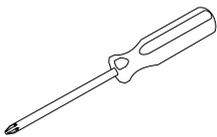


Screwdriver




Drill & Drill Bits



Pencil

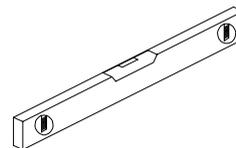


Level

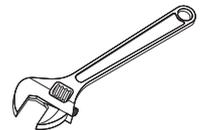

Adjustable Wrench




Coach Screws /
Wood Screws

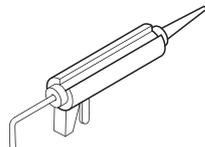


Caulking Gun/Silicone

1. Pre-drill holes and fix vanity back to the wall to prevent it moving after installation. Ensure the vanity cabinet is level before fastening.

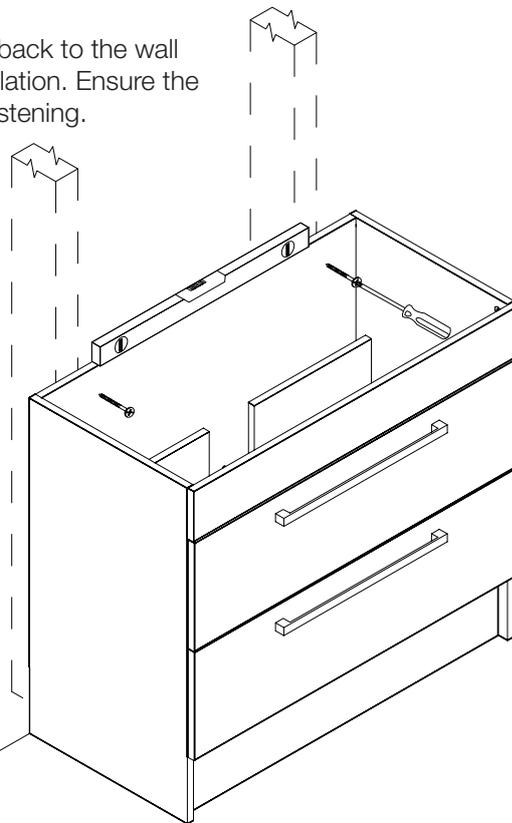



2. Apply silicone to the top edges of the vanity cabinet before final placement of the vanity top.

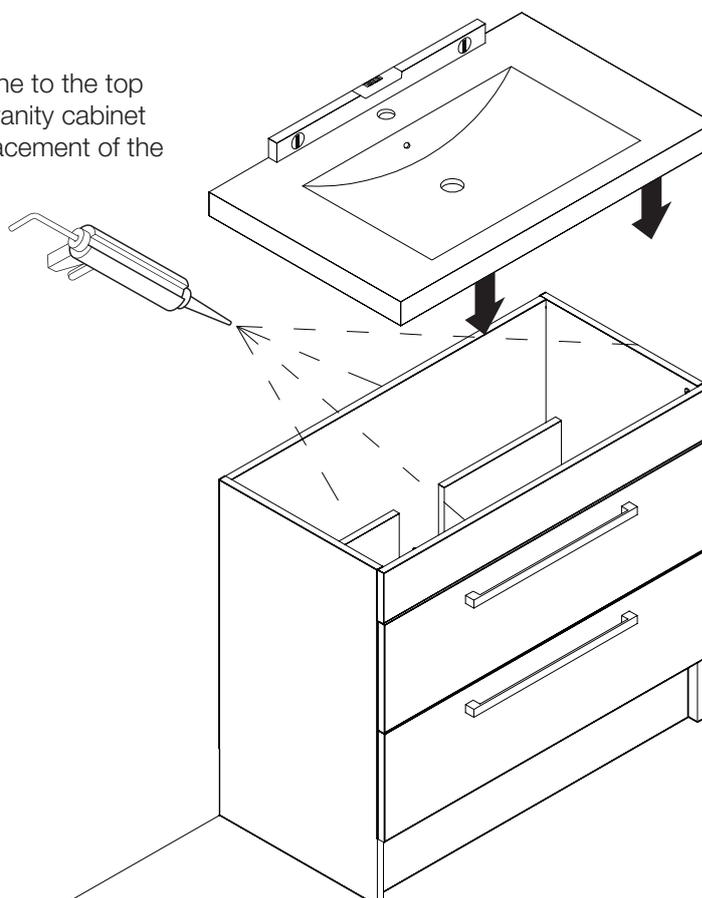


Wall Hung Vanities

⚠ Important! Before installing ensure there is sufficient timber framing in the wall to securely fasten your vanity to.

1. Pre-drill holes in the back of the vanity cabinet as follows:
 - Double fixing holes approx. 50mm from each side
 - Fixing in the centre for vanities 750mm to 1200mm

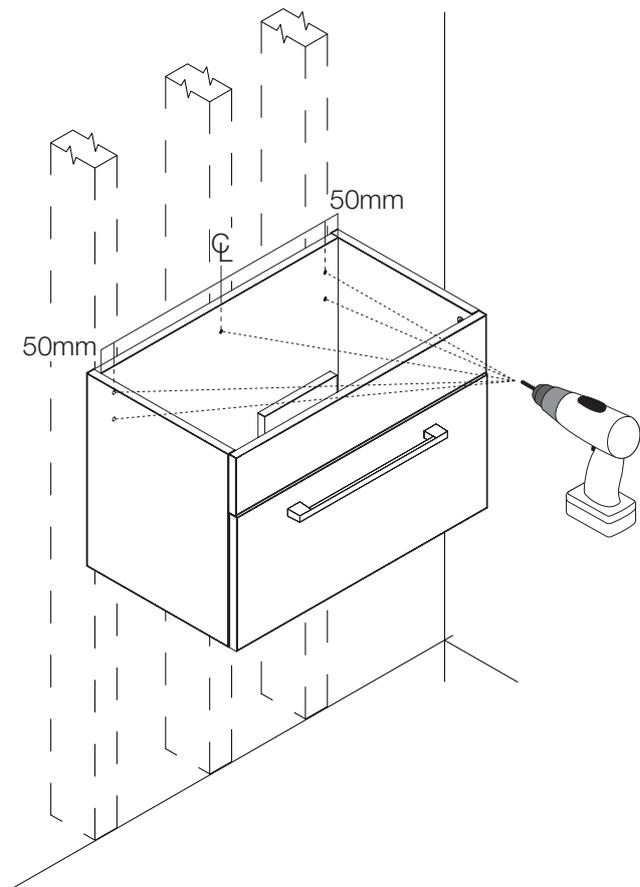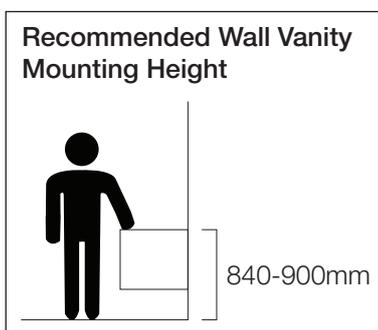


2. Mark your preferred vanity height on the wall (remembering to allow for the vanity top) and fix vanity to the wall using coach screws. Special attention must be made to ensure the vanity cabinet is level.

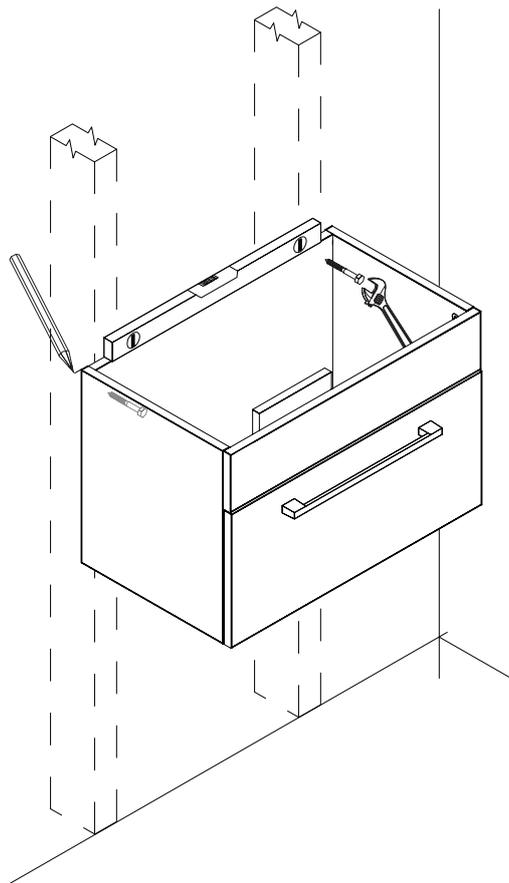

3. Apply silicone to the top edges of the vanity cabinet before final placement of the vanity top.

⚠ Important! For heavier vanity tops that come with bolt sets for mounting on the wall follow the instructions on the next page .

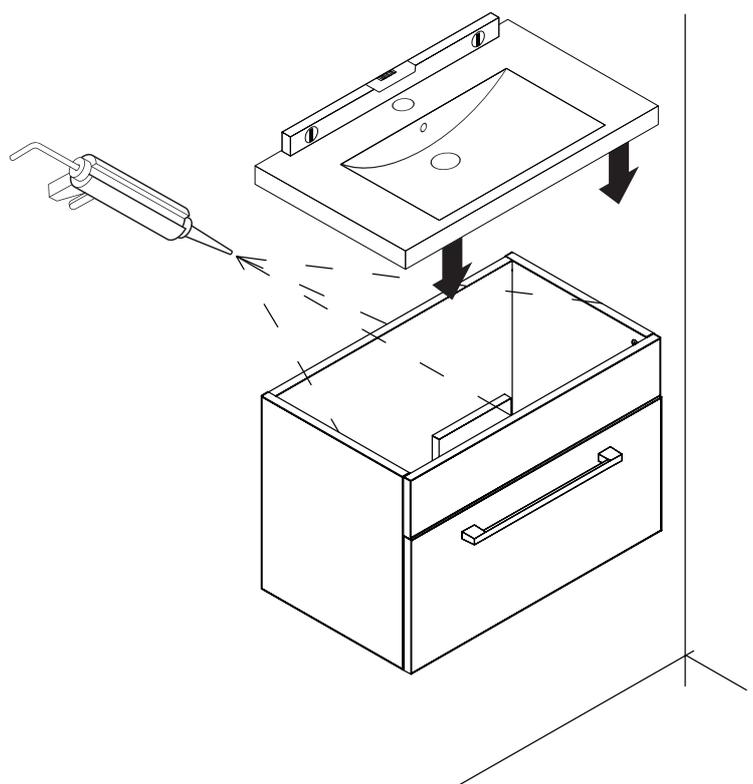

Wall Hung Vanities With Heavy Vanity Tops



progetto
DESIGN COLLECTION

Where Applicable

Wall mounted vanities are not designed to support the weight of heavy vanity tops, therefore heavy vanity tops are required to be bolted to the wall using the bolt set included.


1. Fix vanity top to the wall at your preferred height using the bolt set supplied. Ensure the vanity top is level.

2. Apply silicone to the top edges of the vanity cabinet, lift it up underneath the vanity top and fix to the wall using coach screws.

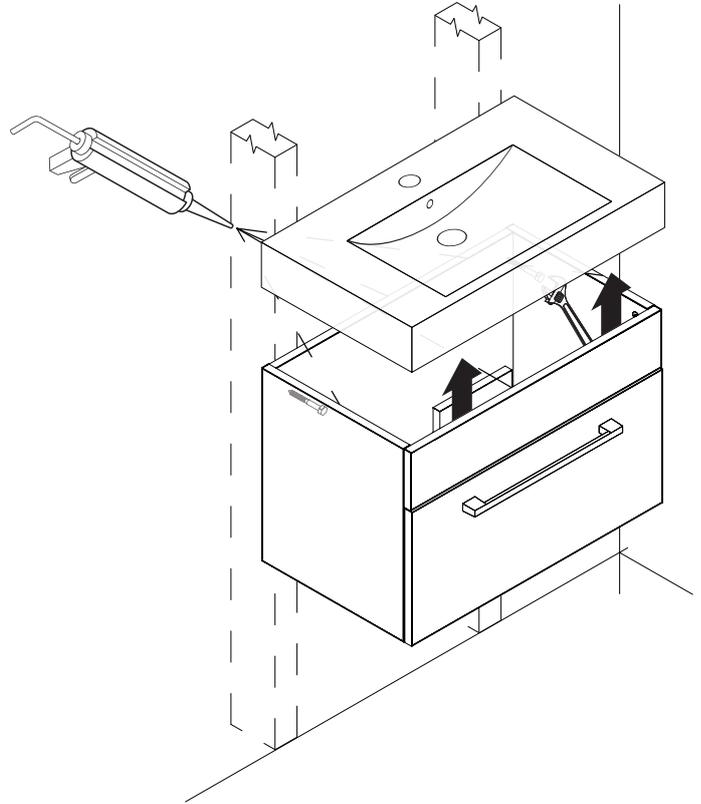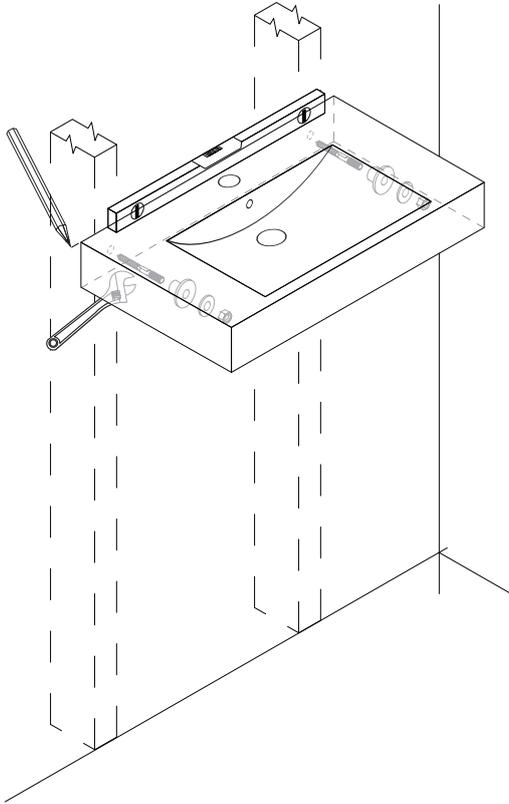

Sealing

⚠ Important! Before use a bead of sealant must be used to seal all edges where water penetration may occur - between cabinet and wall and between cabinet and floor. The warranty will be null and void if water damage occurs after installation.

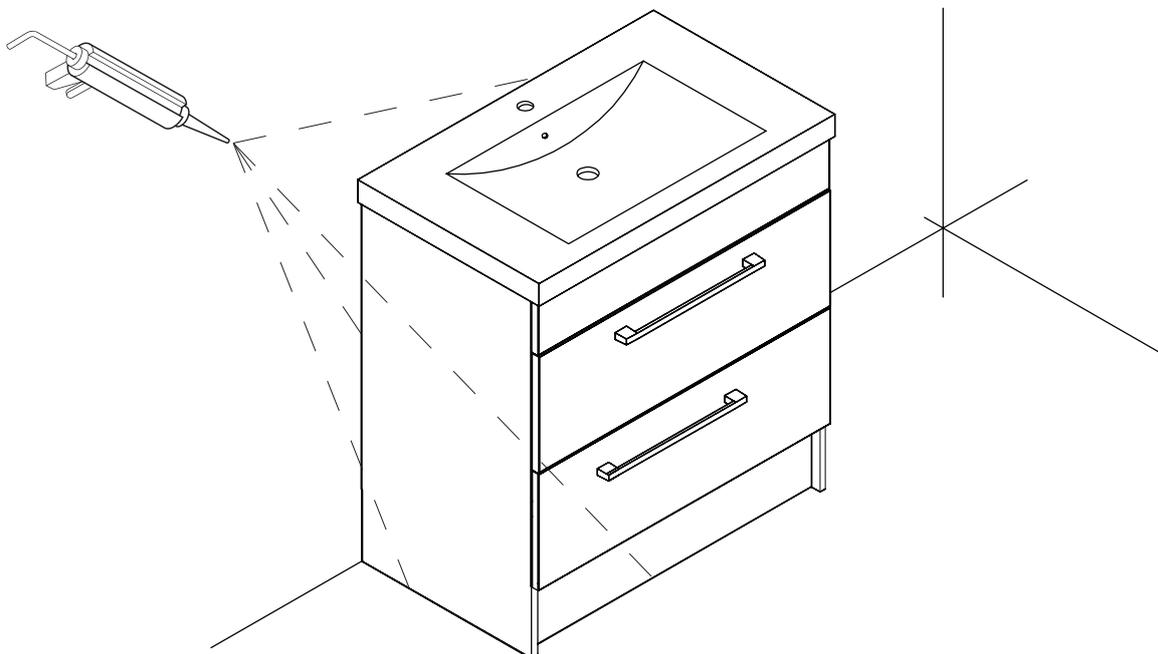


Drawer Handles/Knobs

(Hampton/Linea/Reflex/Solo)


Your vanity comes with three pre-drilled guide holes, covered with a white cover cap, in the rear of the drawer panel. The installer will need to complete the relevant holes depending on your handle/knob requirements as follows:

Remove the cap and drill a 5mm in the required hole position.

⚠ Important! When drilling, hold a block of scrap wood on the face side of the drawer front. This will prevent the melamine or thermofoil from chipping and leaving unsightly damage.

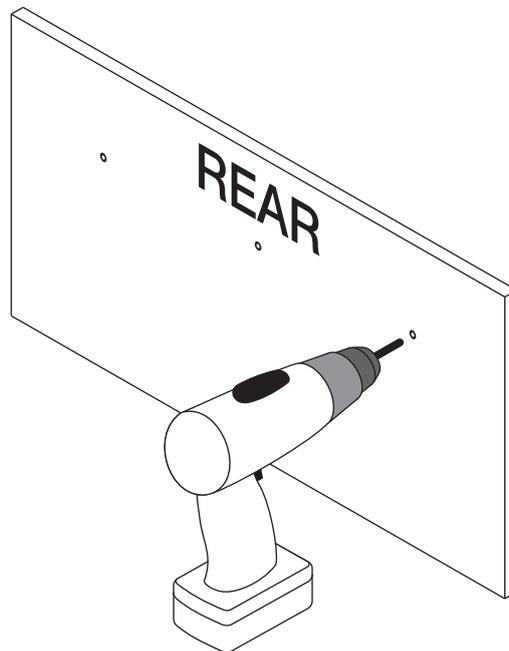


⚠ Important!

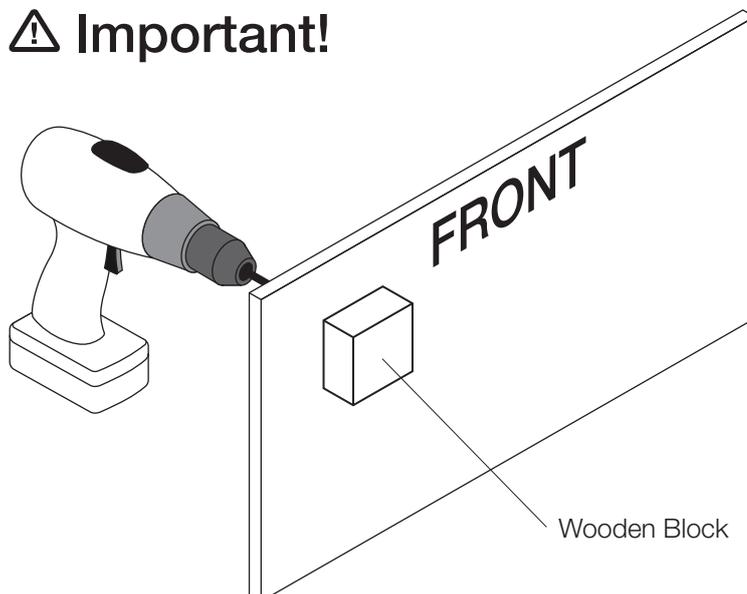


Mirror Panels

⚠ Important! Before installing ensure there is sufficient timber framing in the wall to securely fasten your mirror to.


Mirror Panels hang off metal brackets (supplied) that are screwed to the wall, see illustration below.

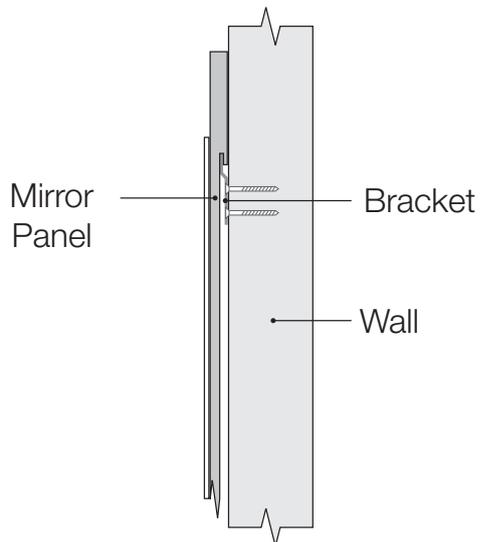


1. Determine the measurement from the top of the mirror panel to the bottom of the bracket (measurement X).

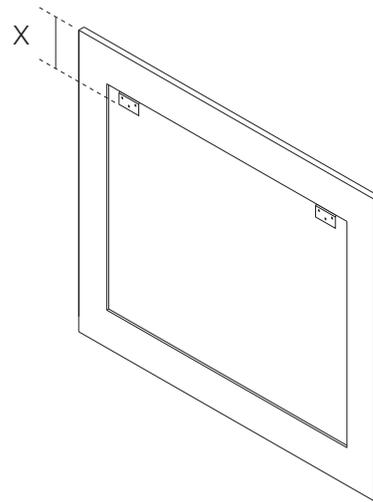

2. Determine your preferred mirror panel height on the wall and mark the position of the brackets (measurement X) below the preferred mirror height. Fix the brackets to the wall using 75mm screws. Special attention must be made to ensure the brackets are perfectly level.

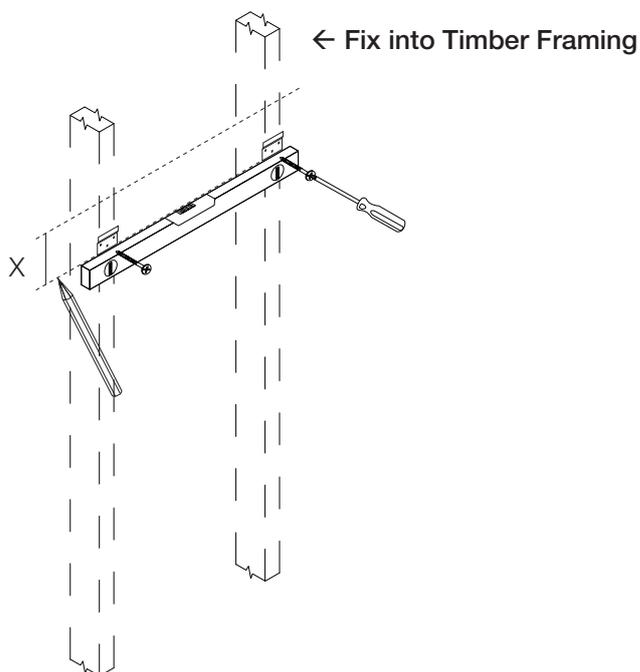


3. Lower the mirror cabinet onto the brackets. Before it is properly seated on the brackets ensure that it is aligned laterally in the correct position.

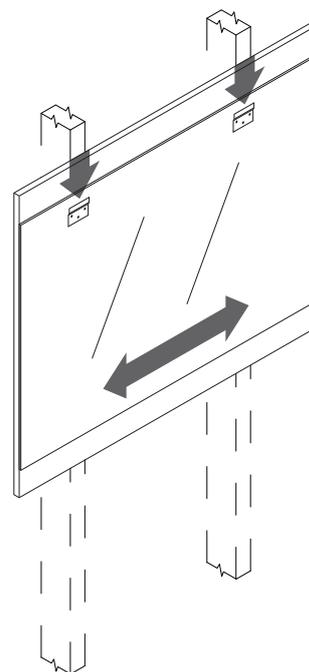


Mirror Cabinets

⚠ Important! Before installing ensure there is sufficient timber framing in the wall to securely fasten your cabinet to.

1. Pre-drill 5mm holes as follows in the back of the mirror cabinet. Holes will need to be positioned where there is timber framing.

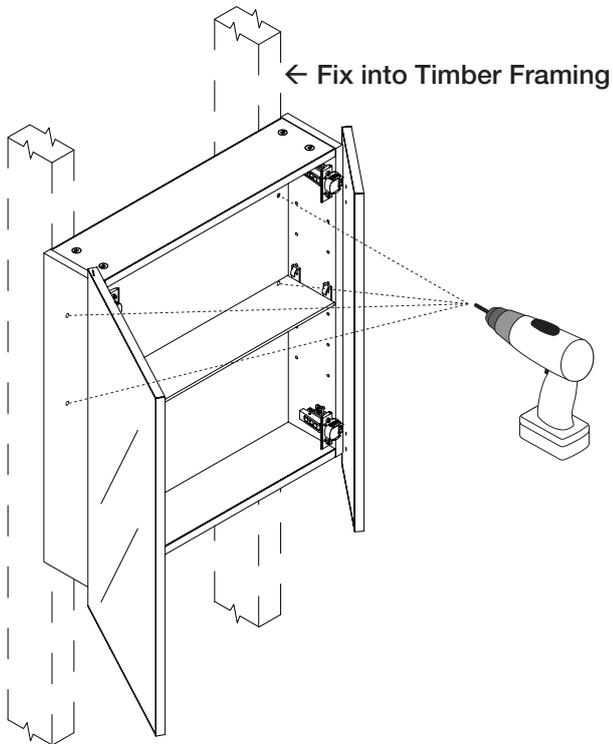


2. Mark your preferred mirror height on the wall and fix the mirror cabinet to the wall using 75mm screws. Special attention must be made to ensure the mirror cabinet is level.

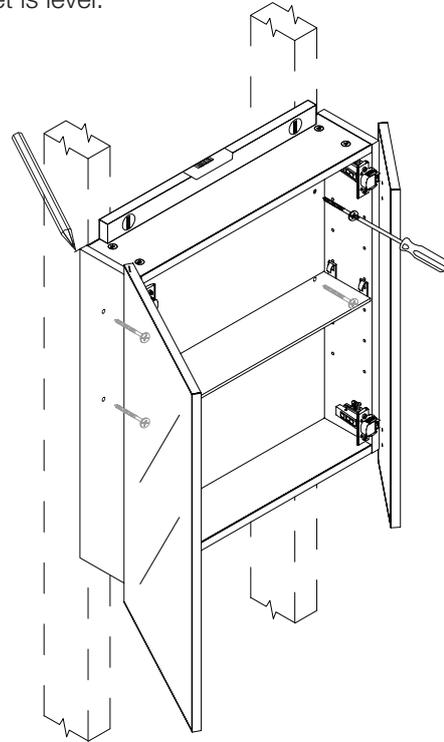


Wall Towers

⚠ Important! Before installing ensure there is sufficient timber framing in the wall to securely fasten your wall tower to.

1. Pre-drill 5mm holes as follows in the back of the wall tower. Holes will need to be positioned where there is timber framing.

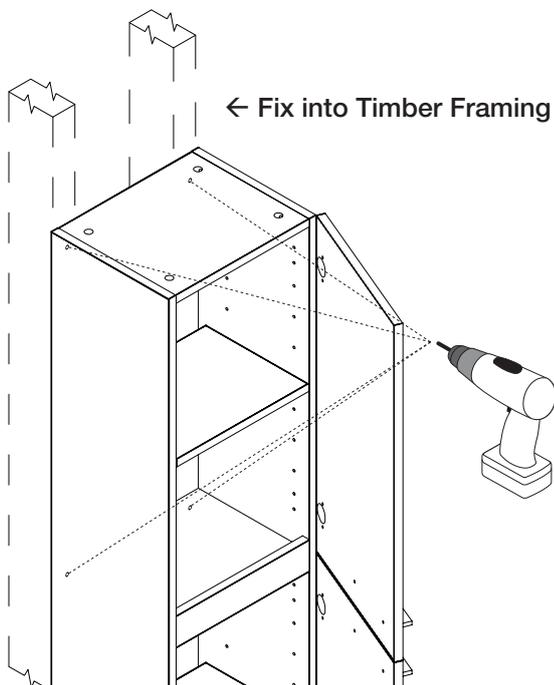


2. Mark your preferred wall tower height on the wall and fix the wall tower to the wall using 75mm screws. Special attention must be made to ensure the wall tower is level and straight.

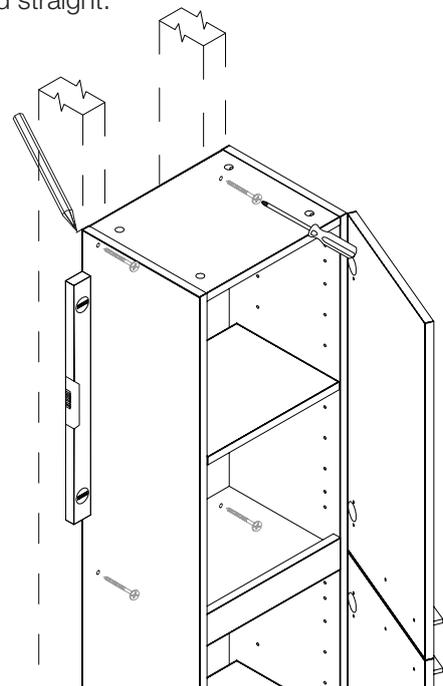


Drawer Adjustment & Removal Instructions

Cabinet drawers will need to be removed prior to the installation of the cabinet. Incorrect removal of the drawer will result in damage to the soft close mechanism.


Drawer Removal

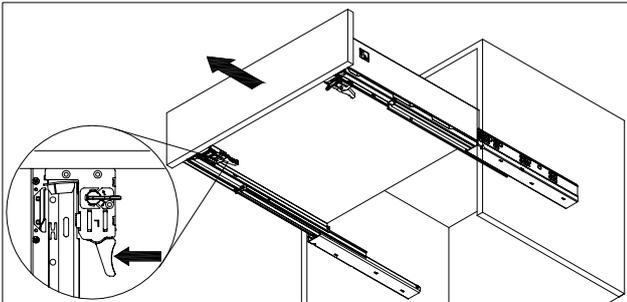


Drawer Re-Installation

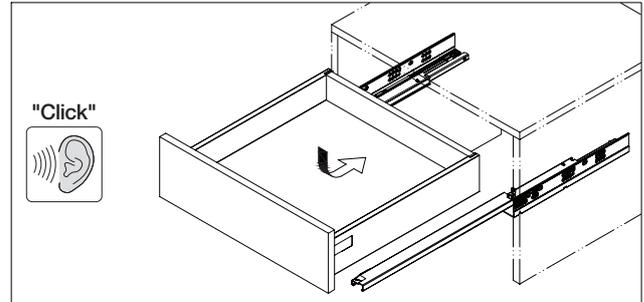

Drawer Adjustment

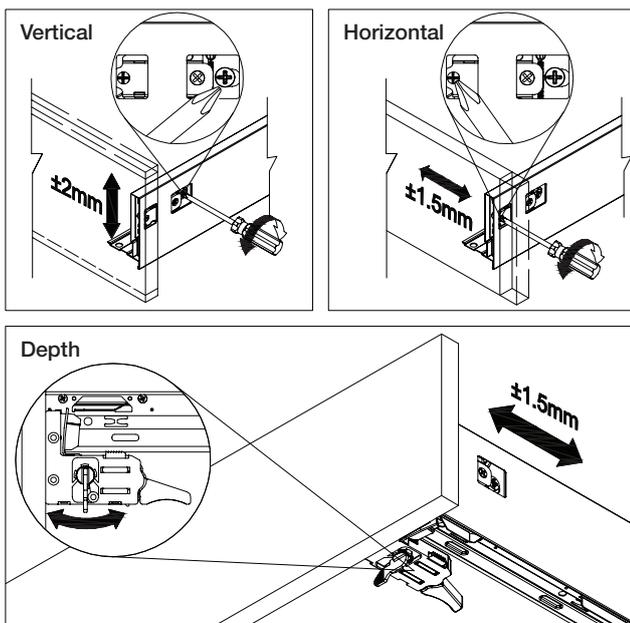

Drawer Front Removal

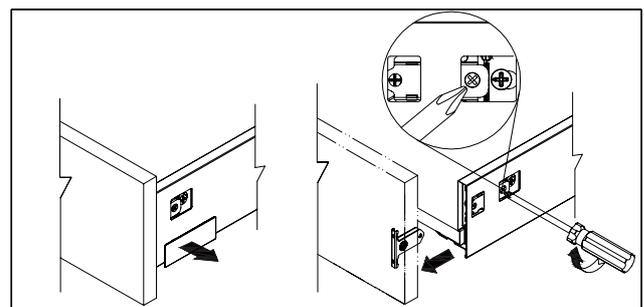



Video

Scan for installation and adjustment video





Hinge Adjustment



Horizontal Adjustment

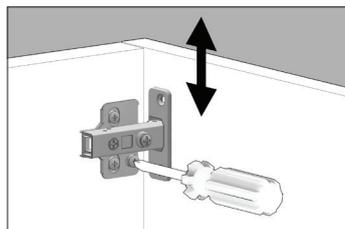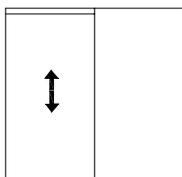

Vertical Adjustment

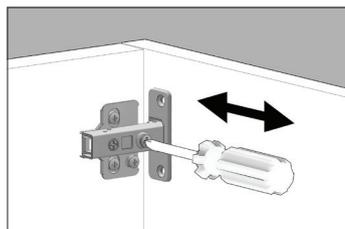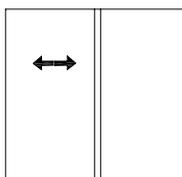

Depth Adjustment

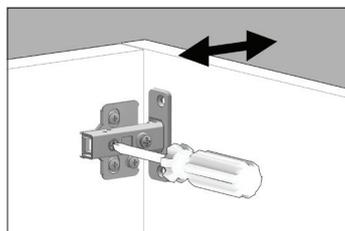

Warranty Information



Progetto Bathroom Furniture products carry a seven (7) year warranty from date of purchase. Proof of purchase needs to be supplied by the purchaser when making a claim.

Plumblin (the NZ distributor for Progetto) warrants that in the manufacture of its products only high quality workmanship and materials have been used. If within the warranty period there should be a fault with either materials or workmanship Plumblin will either (at its sole discretion) repair or replace the faulty product, but will not be responsible for removal and installation costs.

This warranty does not cover damage by improper installation, abuse, accident, excessive wear and tear, improper care and maintenance, natural causes (sunlight and water), water temperatures above 55°C, humidity and over environmental conditions.

IMPORTANT NOTE: Under no circumstances tile vanity cabinets and/or tops 'into' the wall.

Progetto vanity cabinets & tops must be fitted to finished wall coverings. The Warranty does not cover any vanity and/or top that has been tiled 'into' a wall i.e., fitting or fixing a vanity to a wall and tiling into the side and around it, and/or tiling down and/or around the vanity top.

For full details about our warranty visit plumblin.co.nz/warranty-information