


INSTALLATION INSTRUCTIONS

CLAYBROOK WALL HUNG BASINS | AP60/DE56/AY45



Tools Required For Installation (Not Included)




Silicon Gun



Tape Measure



Drill



Pencil

NOTICE:

1. Check for any damage prior to installing the basin
2. Do not leave any tools sitting inside the basin as this can damage the surface

MAINTENANCE

Use a soft moist cloth for cleaning the basin. Do NOT use abrasives or hard cloths. Regular cleaning with a soap solution is recommended. Do NOT use strong bleaching agents. If acid liquids penetrate the surface, remove them immediately with a soft cloth.

Distributed by:

Plumbl ine


Exceptional Bathrooms.
Exceptional Choice.

T 04 568 9898 E sales@plumbl ine.co.nz www.plumbl ine.co.nz


INSTALLATION INSTRUCTIONS

CLAYBROOK WALL HUNG BASINS| AP60/DE56/AY45


1. Refer to the specification sheets on the website to locate where the supplied brackets will sit.
2. Fix the brackets directly to the framing prior to installing the wall-lining as pictured below.
IMPORTANT: BRACKETS MUST BE INSTALLED AS SHOWN BELOW, INSTALLING THESE UP-SIDE DOWN CAN CAUSE STRESS ON THE BASIN CAUSING IT TO CRACK.

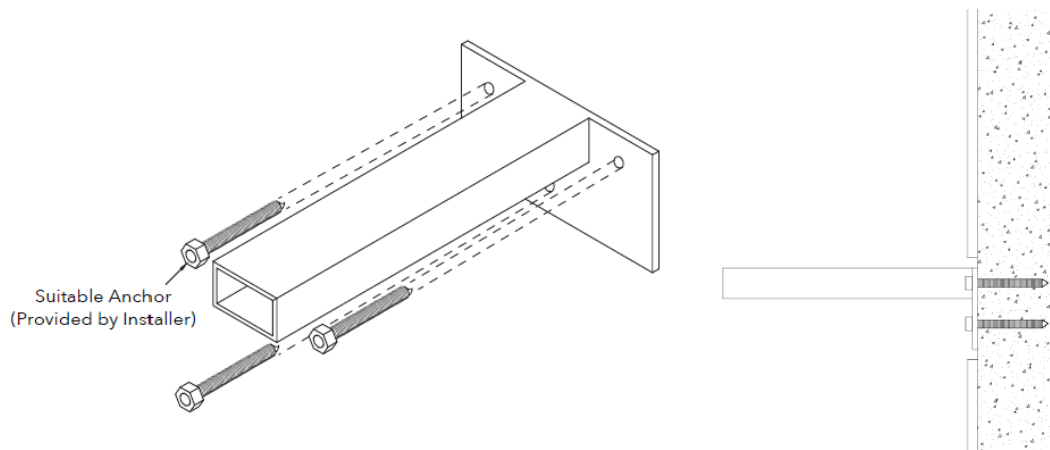

3. After installing the brackets, ensure they are sitting level.



4. Place the basin on the brackets and apply a bead of silicon around the back edge. Finally fit off with tapware, waste and bottle trap.

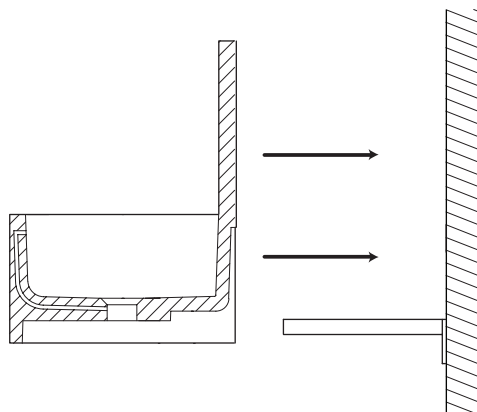

Distributed by:

Plumblíne

Exceptional Bathrooms.
Exceptional Choice.

T 04 568 9898 E sales@plumblíne.co.nz www.plumblíne.co.nz