

Vanity Drawer Adjustment/Removal

Mia / Plaza

There are 2 types that are easy to tell apart:

The Difference: the new version has a red screw under the side cover and no ridges in the side.

Old style (approx. pre mid-2021):



Remove complete drawer: Open drawer all the way, lift the blue-circled lever on both sides up and keep pulling drawer outwards

Front Up / Down: Turn yellow-circled screw

Front Left / Right: Turn red-circled screw

Remove front: Rotate purple-arrowed screw towards the front (CW on RH side, ACW on LH side)

New style (approx. mid-2021 onwards):



Remove complete drawer: Open the drawer all the way, push the blue levers on both sides upwards simultaneously and keep pulling drawer

Front Up / Down: Turn yellow-circled screw

Front Left / Right: Turn red-circled screw

Remove front: Lift the flap obscuring the purple-circled screw, insert screwdriver and rotate

Deco / Forma / Frame / Hampton / Linea / Prava / Reflex / Solo / Stanza / Toscana

We have about 3 different brands for these, and its mostly random which one a given vanity has.

Enko – the most common

Identified by: big blue levers underneath and all adjustment screws on the outside of the drawer

Tekform/Stefano Orlati – mostly found on Melamine vanities. Were used when Enko had no stock


Identified by: all adjustment screws on inside and within 1 hole

DTC – quite rare and mostly on older vanities, no longer used

Identified by: adjustment covers on both inside and outside

Vanity Drawer Adjustment/Removal

Enko:

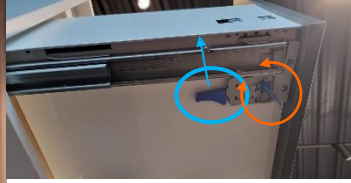

Remove complete drawer: reach under the drawer and pull both the blue levers outwards and keep pulling the drawer


Front Up / Down: Turn yellow-circled screw

Front Left / Right: Turn red-circled screw

Drawer In / Out: Turn orange-circled knob underneath drawer

Remove front: Turn purple-circled screw towards the front (direction of arrow)

Tekform:

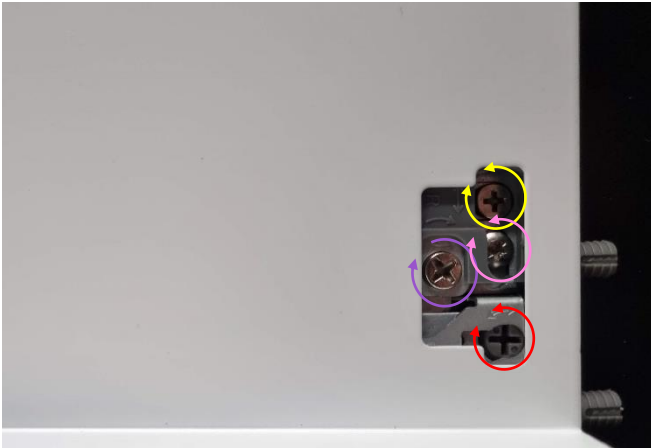


Remove complete drawer: Open the drawer all the way, push the blue-circled levers on both sides upwards simultaneously and keep pulling drawer

Front Up / Down: Loosen pink-circled screw, turn yellow-circled screw, then tighten pink-circled screw

Front Left / Right: Turn red-circled screw

Remove front: Turn purple-circled screw towards the front panel (direction of arrow)

DTC:

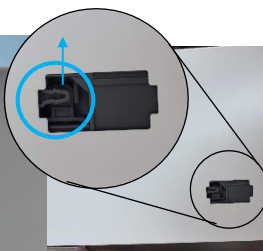

Remove complete drawer: Open the drawer all the way, push the blue levers on both sides upwards simultaneously and keep pulling drawer

Front Up / Down: Turn yellow-circled screw

Front Left / Right: Turn red-circled screw

Remove front: Rotate green lock (1) down to the level of the purple lock then back to starting position to release, then release the purple lock (2)

Vanity Drawer Adjustment/Removal

Falper 7.0

Falper uses Blum concealed runners.



Remove complete drawer: reach under the drawer and pull both the orange levers outwards and keep pulling the drawer

The drawers shouldn't need adjusting, it is a bit of a tricky process.

Ply25

Ply vanities use the Harn Ritma Cube drawer runners.



Remove complete drawer: Make sure the cabinet is installed or well supported, open drawer all the way, give a short sharp tug upwards on the drawer front and the drawer should unclip from the runners. To reinstall, place drawer on opened runners and close drawer tightly, you should hear a click as the runners and drawer connect

Front Up / Down: Loosen pink-circled screw, turn yellow-circled screw, then tighten pink-circled screw

Front Left / Right: Turn red-circled screw

Remove front: Unclip gallery rails by sliding back covering collar and sliding it out of mount. Turn purple-arrowed screw towards the front panel (direction of arrow) then lift upward on front