


BUDDY WALL MOUNT BATH/SHOWER SET | CB030

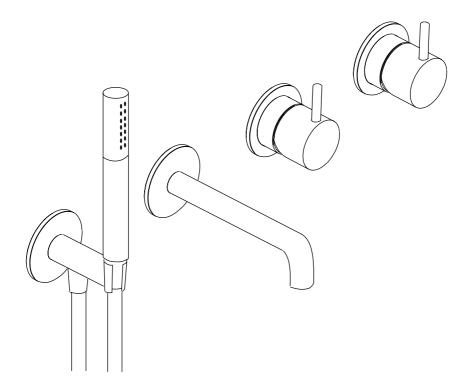



IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:



RECOMMENDATIONS FOR INSTALLATION




ATTENTION: Failure to follow these recommendations may void the warranty. It is recommended that a qualified, licensed tradesperson install this product.




Water Pressure: 3 bar

Product performance cannot be guaranteed if pressure is less than 1 bar. Above 5 bar a pressure regulator must be installed. Failure to do so voids the product warranty.



Water Temperature: 45°-65°C






Stop Taps/Filters

When possible angle valves and/or filters are recommended to prevent impurities and debris

Pre-Flush

Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

CLEANING & MAINTENANCE

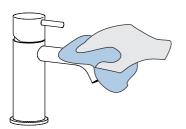

Cleaning

Clean with warm soapy water and a smooth cloth. Avoid abrasive sponges or detergents as these will damage the finish.


To preserve the finish it is recommend to apply a stainless steel oil/mineral oil on a monthly basis.

Aerator Maintenance

Remove the aerator, either with a spanner or an aerator cartridge key.

Immerse for half a day in water-vinegar solution (80-20%).

Wash, then reassemble.





Cartridge Replacement

Before you start, turn off the water supply to the mixer.

- 1. Remove the handle
- 2. Unscrew the dome (hand tightened)
- 3. Unscrew the locking nut
- 4. Remove the cartridge

Re-assemble in reverse order


Max tightening torque on locking nut: 10-12 Nm

Warranty Information

For full details about our warranty visit plumbline.co.nz/warranty-information


BEFORE WALL LINING

1 Ensure the framing allows for the internals and wingbacks to be placed in the desired position.

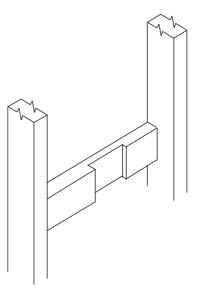


▲ IMPORTANT!!

Please also note the diagram on how to set out the shower mixer with the diverter.

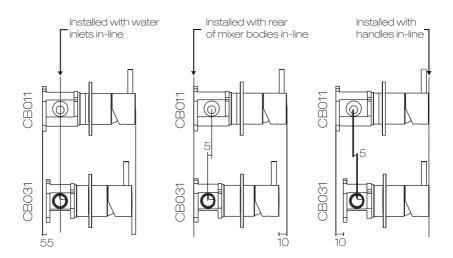

2 Fix the internals and wingbacks into place and run the piping between them. We recommend to run the piping as shown in the diagram.

progette

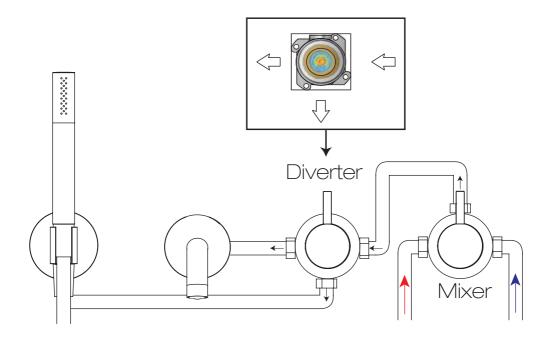

▲ IMPORTANT

Prior to wall lining, all fittings must be checked for for leaks.


- Charge the system with mains pressure and plug both of the wingbacks.
- Open the valve and test for leaks while adjusting the diverter to both positions.
- Mains pressure only, max 800 KPA hydrostatic test.

DO NOT HYDROSTATIC TEST WITH MIXER OPEN!




AFTER WALL LINING


3 Remove the protective sleeves from the mixer and diverter, then install the externals.

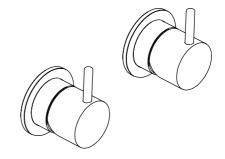


4 Apply thread sealent to the male threads on the sipogts and screw them into the wingbacks.

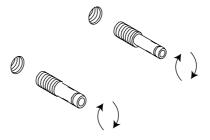

5 Finally fit off the externals of the spout and handshower.

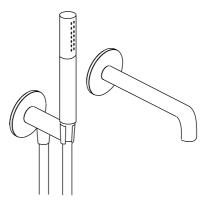

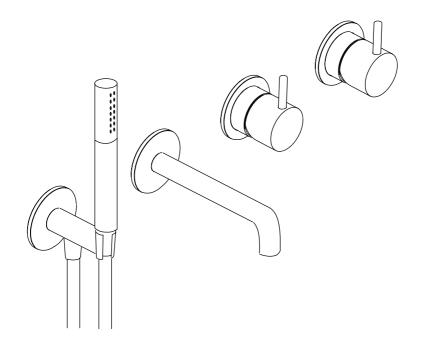



For any questions or comments please contact us

Distributed by:



T 04 568 9898 E sales@plumbline.co.nz www.plumbline.co.nz