


INSTALLATION INSTRUCTIONS

progetto
DESIGN COLLECTION

TUBE/SWISS FLOOR MOUNT BATH FILLER & HANDSHOWER

TU1500/SW1500.BS

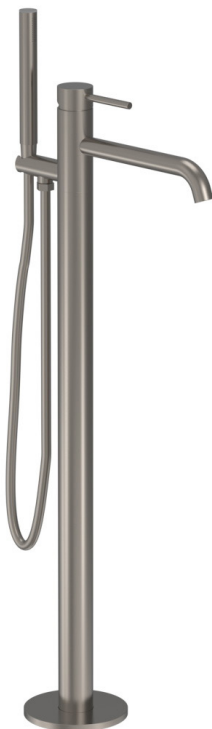

IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:



Plumbline

T 04 568 9898 E sales@plumblin.co.nz
www.plumblin.co.nz

RECOMMENDATIONS FOR INSTALLATION




ATTENTION: Failure to follow these recommendations may void the warranty.
It is recommended that a qualified, licensed tradesperson install this product.

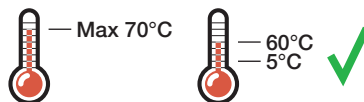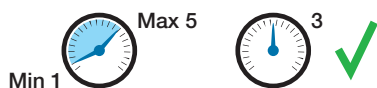

Water Pressure: 3 bar

Product performance cannot be guaranteed if pressure is less than 1 bar. Above 5 bar a pressure regulator must be installed. Failure to do so voids the product warranty.


Water Temperature: 5° - 60°C

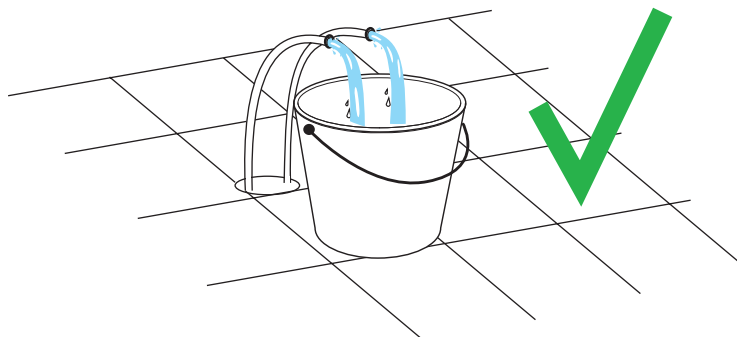

Pre-Flush


Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

CLEANING & MAINTENANCE

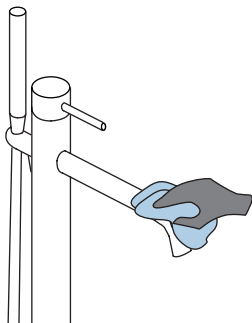


Cleaning

Clean with warm soapy water and a smooth cloth. Avoid abrasive sponges or detergents as these will damage the finish.

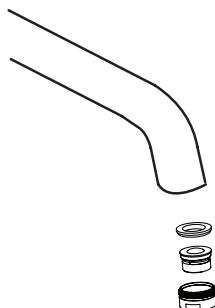


Aerator Maintenance

Remove the aerator with an aerator cartridge key. Immerse for half a day in water-vinegar solution (80-20%). Wash, then reassemble.

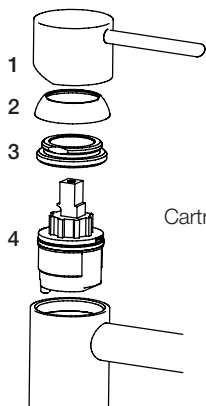

Cartridge code: BSD-40

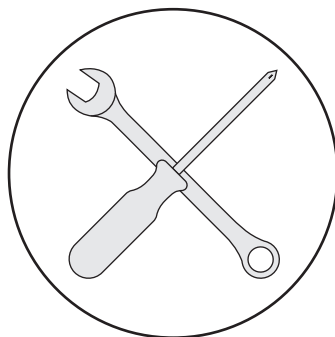

Cartridge Replacement

Before you start, turn off the water supply to the mixer.

1. Remove the handle
2. Unscrew the dome (hand tightened)
3. Unscrew the locking nut
4. Remove the cartridge

Re-assemble in reverse order

⚠ Max tightening torque on locking nut: 10-12 Nm

Warranty Information

For full details about our warranty visit plumbline.co.nz/warranty-information




IMPORTANT!

Prior to installation remove all parts from the packaging and inspect all parts for any freight damage

The Underfloor Mounting Box must be recessed into the floor and levelled (using the spirit level provided) as shown.

⚠ Mounting Box must be installed flush with, or just below, the finished floor level. Please note however, the tiling box should protrude the finished floor level.



Underfloor Mounting Box

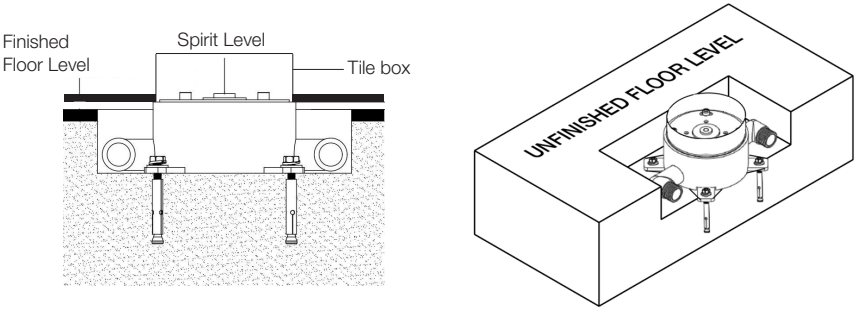

- 1


Drill the holes for mounting the Underfloor Mounting Box
- 2

Install inlet fittings and screw them into the Underfloor Mounting Box.
Set the Underfloor Mounting Box into the recess in the floor and level using the spirit level provided.

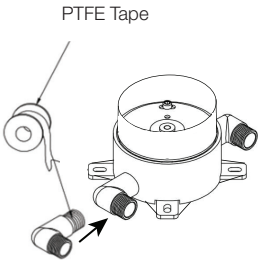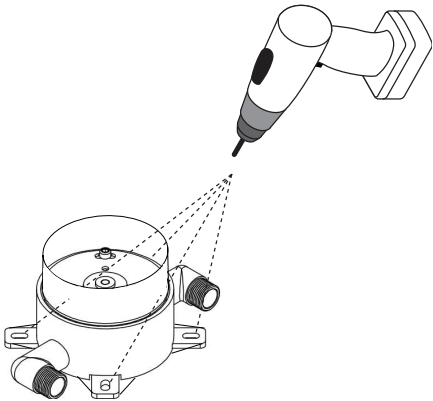


INSTALLATION INSTRUCTIONS


- 3 Fix the Underfloor Mounting Box to the floor with toggle bolts provided. Ensure that it is fastened securely.

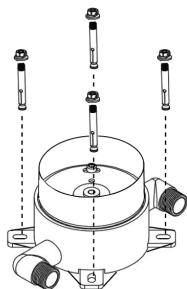


- 4 Connect the hot & cold inlet pipes to the inlet fittings.

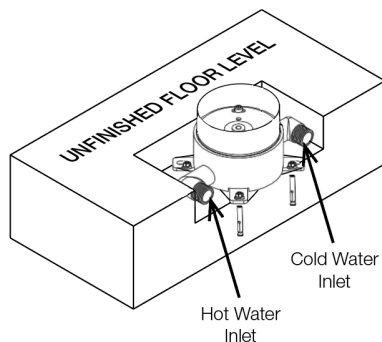

- 5 Complete the finished floor surface, ensuring the floor surface is finished up to the tile box.

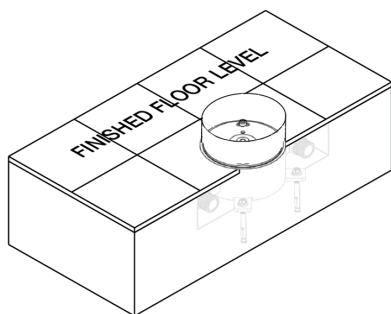


- 6 Using a multi tool cut the tile box so that it is flush with the finished floor level.

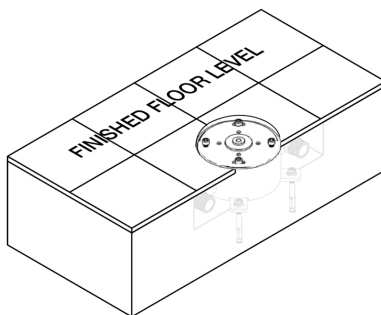


INSTALLATION INSTRUCTIONS

progettø


- 7** Slide the flange up the mixer body and then attach the mounting plate to the underside.

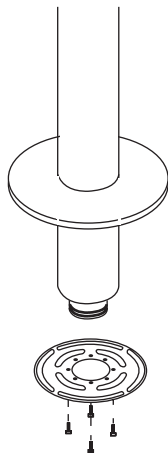

- 8** Slot the spigot down into place and rotate the bath filler to the desired position.

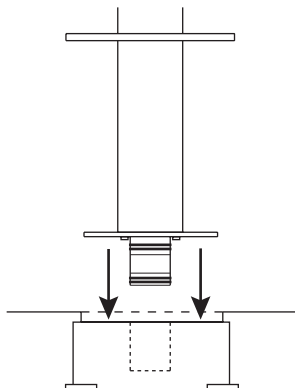


- 9** Using the four supplied screws, fasten the Bath Filler to the Underfloor Mounting Box.

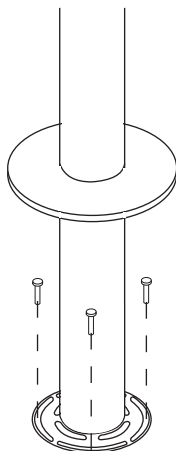


- 10** Push the base flange down to the floor, and connect up the handpiece and hose.



Handshower On

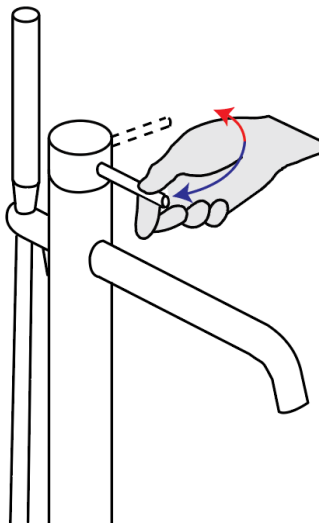

Bath Spout On

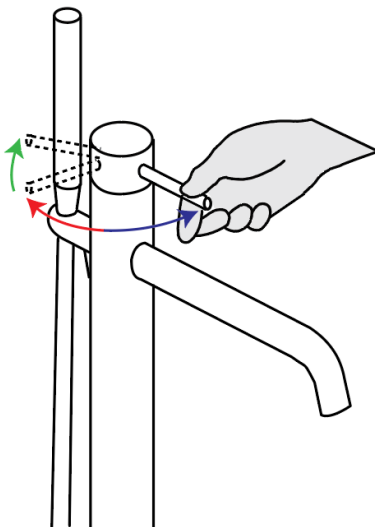

- Please note, Cartridge is a 4 way operation.
- Handshower has controlled Hot/Cold adjustment only (not flow).
- Bath spout has controllable water pressure and temperature as per a standard mixer.
- Cartridge code - BSD-40