


INSTALLATION INSTRUCTIONS

progetto
DESIGN COLLECTION

CASCADE 1 WATER FALL DECK MOUNT BATH SPOUT

12016

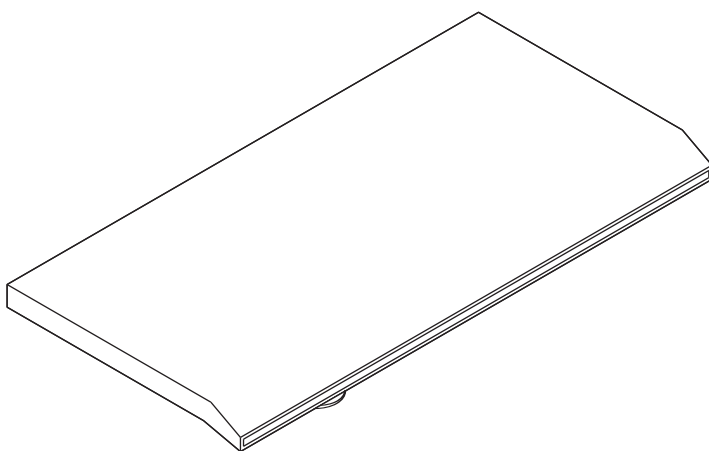

IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:



Plumbline

T 04 568 9898 E sales@plumblin.co.nz
www.plumblin.co.nz

RECOMMENDATIONS FOR INSTALLATION



ATTENTION: Failure to follow these recommendations may void the warranty. It is recommended that a qualified, licensed tradesperson install this product.

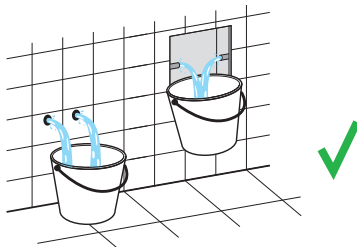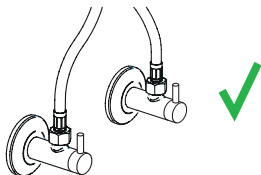



Stop Taps/Filters

Angle valves and/or filters are recommended to prevent impurities and debris entering the mixer.

Pre-Flush

Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

CLEANING & MAINTENANCE

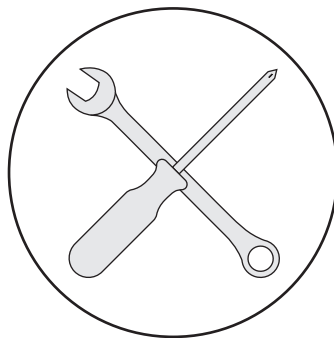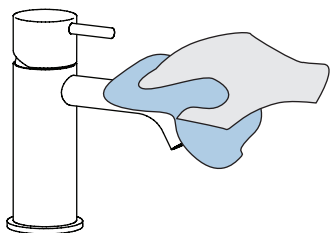


Cleaning

Clean with warm soapy water and a smooth cloth. Avoid abrasive sponges or detergents as these will damage the finish.


Warranty Information

For full details about our warranty visit plumbline.co.nz/warranty-information


1

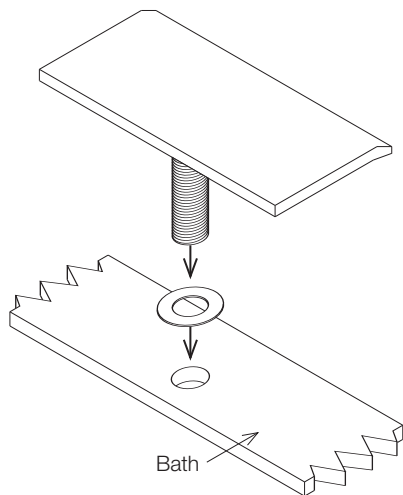

2

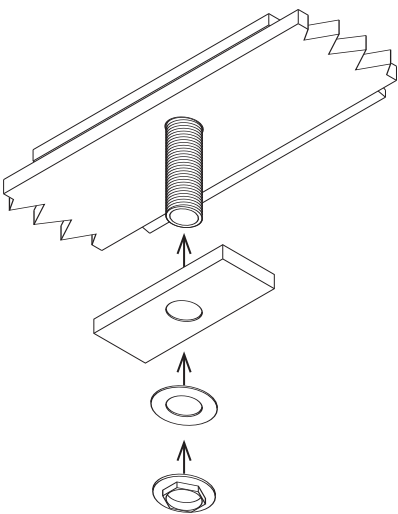

3

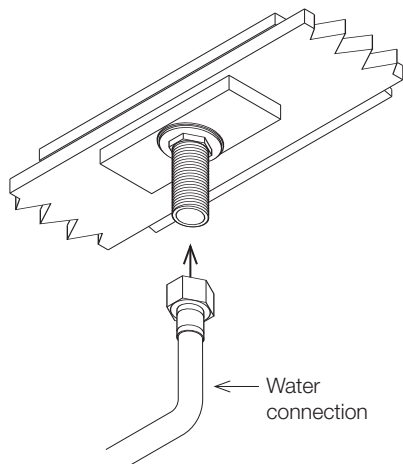

4

