

# INSTALLATION INSTRUCTIONS

NIAGARA SOLID SURFACE FREESTANDING BASINS | NIA0946/NIA1862



## Parts/Materials Required For Installation

1. **32mm waste**
2. We recommend using a **32mm adjustable S trap**, however, please ensure this is compatible with the chosen waste.
3. **PVC Pipe**
4. **Silicone** - Please ensure this is non-acidic.

### NOTICE:

1. Check for any damage prior to installing the basin.
2. Do not put any tools inside the basin as this can scratch or damage the surface.
3. This is made from Solid Surface, a crisp white robust and durable material with a smooth satin feel, for more on what you can expect with Solid Surface, refer to this link - <https://plumblines.co.nz/productattachments/download/link/id/1149/>

### MAINTENANCE

For care and maintenance of the basin please refer to the link below:

<https://plumblines.co.nz/productattachments/download/link/id/1148/>

Distributed by:

**Plumblines**


Exceptional Bathrooms.  
Exceptional Choice.

T 04 568 9898 E [sales@plumblines.co.nz](mailto:sales@plumblines.co.nz) [www.plumblines.co.nz](http://www.plumblines.co.nz)


# INSTALLATION INSTRUCTIONS

## NIAGARA SOLID SURFACE FREESTANDING BASINS |


**1.** Position the PVC pipe and trap to line up with where the waste will sit.

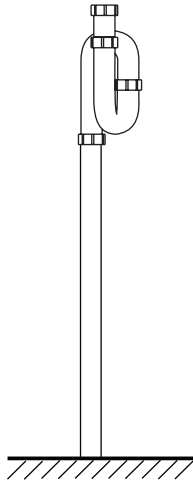


**2.** Dry-fit the basin prior to applying any silicone to ensure the trap and waste align. Once in place mark out where the underside of the basin sits.

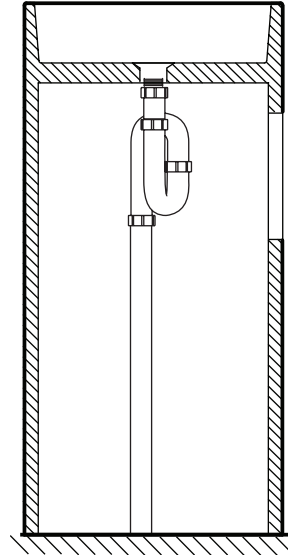

**3.** Apply a bead of silicone where the underside of the basin will sit.

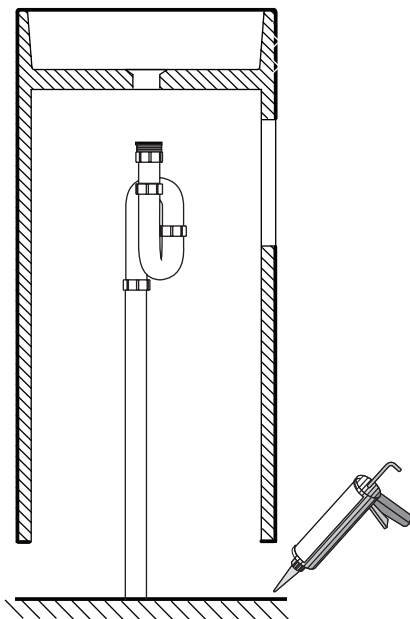

**4.** Fix the waste in place. Any servicing of the pipework can be done through an open void in the back of the basin

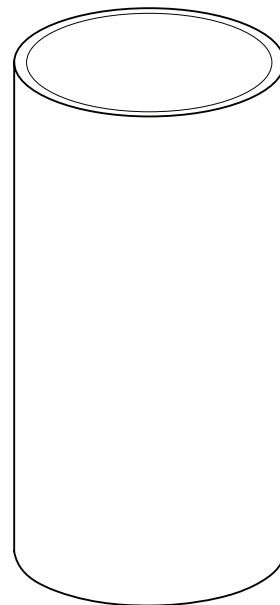

Distributed by:

**Plumblin**

Exceptional Bathrooms.  
Exceptional Choice.

T 04 568 9898 E [sales@plumblin.co.nz](mailto:sales@plumblin.co.nz) [www.plumblin.co.nz](http://www.plumblin.co.nz)