

# INSTALLATION INSTRUCTIONS

progetto  
DESIGN COLLECTION

SWISS SHOWER COLUMN | SW6316.BS / SW63163F.BS



## IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:



**Plumblin**e

T 04 568 9898 E [sales@plumblin.co.nz](mailto:sales@plumblin.co.nz)  
[www.plumblin.co.nz](http://www.plumblin.co.nz)

## RECOMMENDATIONS FOR INSTALLATION



**ATTENTION: Failure to follow these recommendations may void the warranty.**  
It is recommended that a qualified, licensed tradesperson install this product.

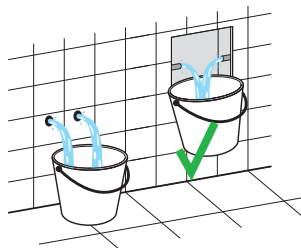

### Water Pressure: 3 bar

Product performance cannot be guaranteed if pressure is less than 1 bar. Above 5 bar a pressure regulator must be installed. Failure to do so voids the product warranty.




### Water Temperature: 5°- 60°C

### Pre-Flush

Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

---

## CLEANING & MAINTENANCE

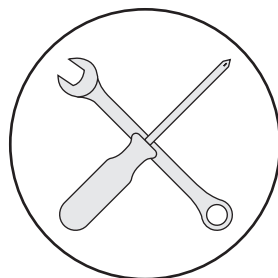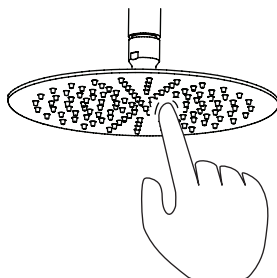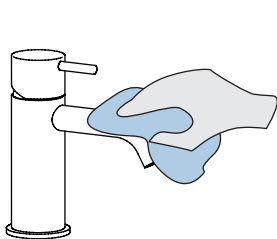

### Cleaning

Clean with warm soapy water and a smooth cloth. Avoid abrasive sponges or detergents as these will damage the finish.

### Nozzle Maintenance

To remove calcium/lime build-up on the rainhead nozzles, periodically clean them by flicking them with your finger as shown.


### Warranty Information

For full details about our warranty visit [plumbline.co.nz/warranty-information](https://plumbline.co.nz/warranty-information)

## COMPONENTS





**ATTENTION: PRIOR TO INSTALLING THIS PRODUCT PLEASE ENSURE YOU HAVE ALL THE REQUIRED PARTS AND COMPONENTS.**

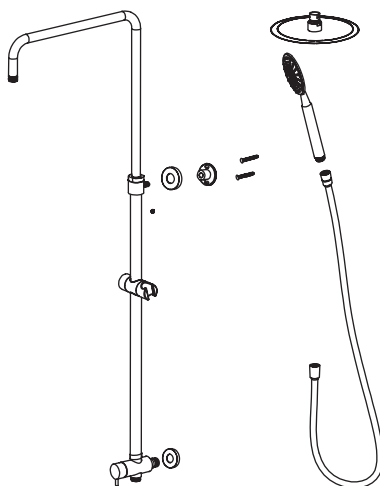

## INSTALLATION INSTRUCTIONS


- 1 Measure out for the fixing point and use a level to ensure that it is plumb with the water outlet.
- 2 Fix the Wall Bracket into solid fixing using the supplied screws.

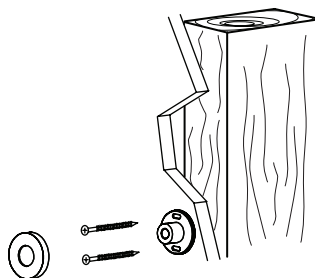


# INSTALLATION INSTRUCTIONS

progetto


- 4 Apply thread sealant tape to the inlet thread of the diverter assembly and screw it through the flange into the wingback.

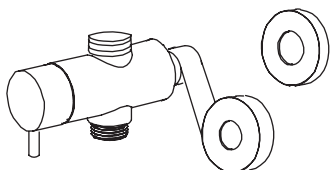

- 5 Fix the rail onto the onto the diverter, ensuring that the supplied washer is inserted in place. Please note, this may need to be carried out simultaneously with step 6.

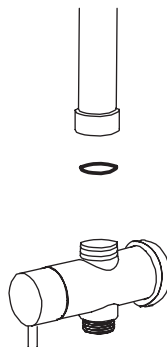

- 6 Push the rail onto the bracket and tighten the locking grub screw to fix the column into place.

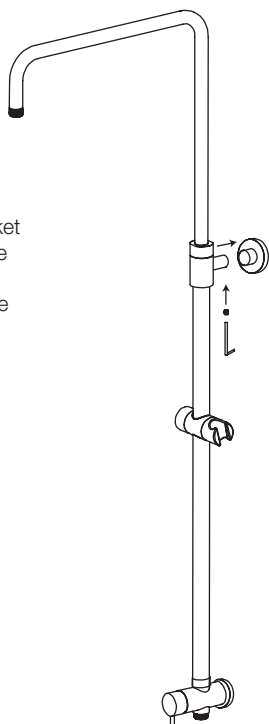

- 7 Install the hose, handpiece and rainhead, then test for performance.

