

# INSTALLATION INSTRUCTIONS

SWISS SLIDE SHOWER | SW0701.BS / SW07013F.BS

progetto  
DESIGN COLLECTION



## IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:


**Plumblin**e

T 04 568 9898 E [sales@plumblin.co.nz](mailto:sales@plumblin.co.nz)  
[www.plumblin.co.nz](http://www.plumblin.co.nz)

# RECOMMENDATIONS FOR INSTALLATION




**ATTENTION:** Failure to follow these recommendations may void the warranty.  
It is recommended that a qualified, licensed tradesperson install this product.

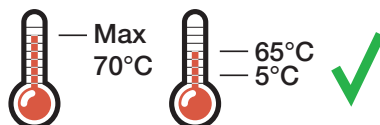

## Water Pressure: 3 bar


Product performance cannot be guaranteed if pressure is less than 1 bar. Above 5 bar a pressure regulator must be installed. Failure to do so voids the product warranty.

## Water Temperature: 5°- 65°C

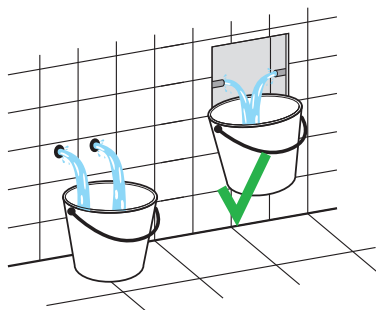

## Pre-Flush

Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

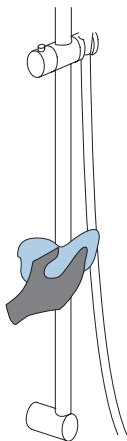


## Cleaning

Clean with warm soapy water and a smooth cloth e.g. microfibre cloth. Avoid abrasive sponges or detergents as these will damage the finish.



## Nozzle Maintenance

To remove calcium/lime build-up on the handpiece nozzles, periodically clean them by flicking them with your finger as shown.

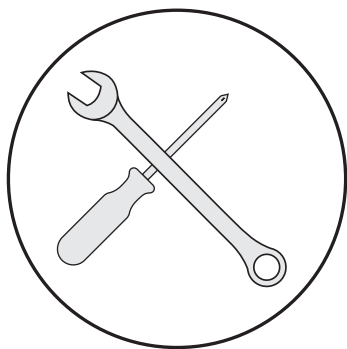

## Warranty Information


For full details about our warranty visit  
[plumblines.co.nz/warranty-information](http://plumblines.co.nz/warranty-information)

# INSTALLATION INSTRUCTIONS




**ATTENTION: Prior to installation remove all parts from the packaging and inspect all parts for any freight damage.**


- 1 Before the wall lining has been installed, choose the position of the wall coupling. Position the 1/2 inch female wingback in the wall accordingly, ensuring that it is firmly fixed in place.

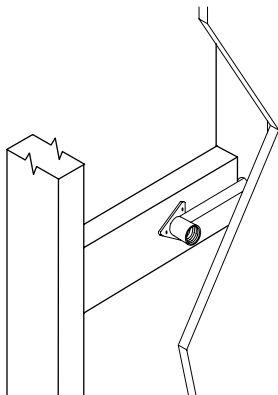


- 2 Ensure that there is sufficient framing inside the wall to fix the slide shower mount brackets to.

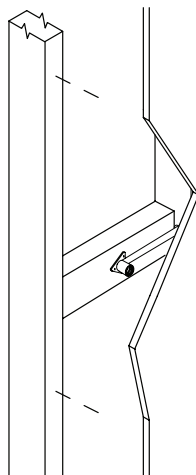

- 3 Mark out the fixings, use a level to check that they are plumb.




- 4 Fix the two mounting brackets in place.

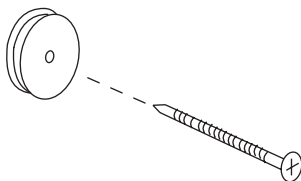


# INSTALLATION INSTRUCTIONS

progetto


- 5 Push the slide rail onto the brackets and tighten the locking grub screw onto each bracket. Do not over tighten!

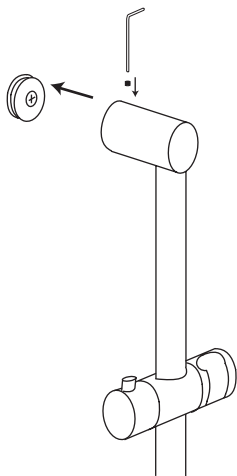


- 6 Apply thread sealant to the male threaded wall coupling.

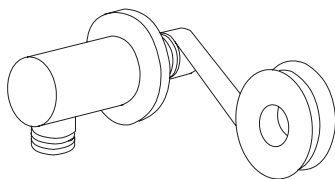


- 7 Slide the flange onto the wall coupling and screw the wall coupling in place and slide the flange back to the wall.

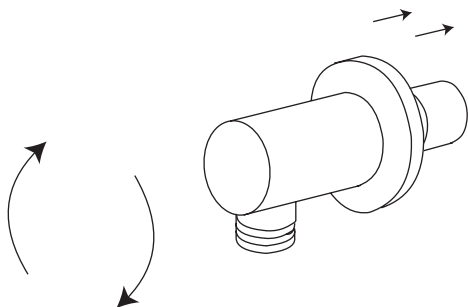

- 8 Finally, connect up the hose and handpiece.



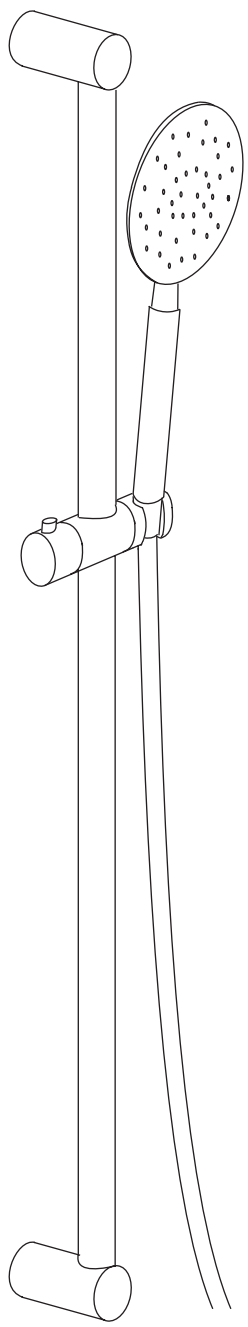



## **IMPORTANT!**

Once Installed, test for for leaks and performance

For any questions or comments please contact us

Distributed by:

**Plumblīne**

**T** 04 568 9898 **E** [sales@plumblīne.co.nz](mailto:sales@plumblīne.co.nz)  
[www.plumblīne.co.nz](http://www.plumblīne.co.nz)