


# INSTALLATION INSTRUCTIONS

## EVO & ZEN FLOOR MOUNT TOILETS

progetto  
DESIGN COLLECTION

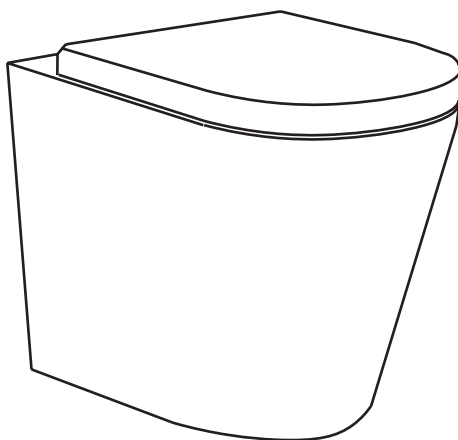

### IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:

**Plumblin**e

T 04 568 9898 E [sales@plumblin.co.nz](mailto:sales@plumblin.co.nz)  
[www.plumblin.co.nz](http://www.plumblin.co.nz)



## IMPORTANT NOTE TO INSTALLER:


- Prior to installation of the toilet pan, wall lining and finished floor, ensure the flush pipe and waste setout align with the toilet pan.
- Installation should be carried out by a qualified, licenced tradesperson.
- Please carefully check the toilet prior to installation to ensure it has not been damaged during handling or transport, and check that you have all the required parts.

## CLEANING & MAINTENANCE

Periodic cleaning and maintenance should be used to avoid formation of damaging lime scale deposits. Clean your toilet with a damp cloth and a non-abrasive liquid cleaner. Stubborn stains and scratches can be removed with a light application of Brasso or a similar cutting compound. Avoid abrasive cleaners on plastic parts, and avoid solvents, heat and sharp objects altogether. The use of cleaners incorporating ingredients which have been identified as harmful effects on ceramic glazing will void the warranty.

### Warranty Information


For full details about our warranty visit [plumbline.co.nz/warranty-information](https://plumbline.co.nz/warranty-information)

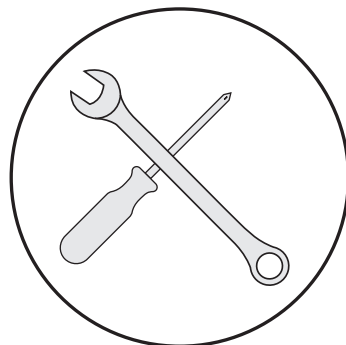

# INWALL CISTERN INSTALLATION


For installation instructions of the inwall cistern please refer to webpage of the particular cistern chosen to be paired with the toilet pan.

It is important to take note of the floor and wall thicknesses in order to correctly position the flush pipe and waste setout so it aligns with the toilet pan. This needs to be re-checked at final fitoff. The pan inlet and flush pipe outlet **MUST** align perfectly.

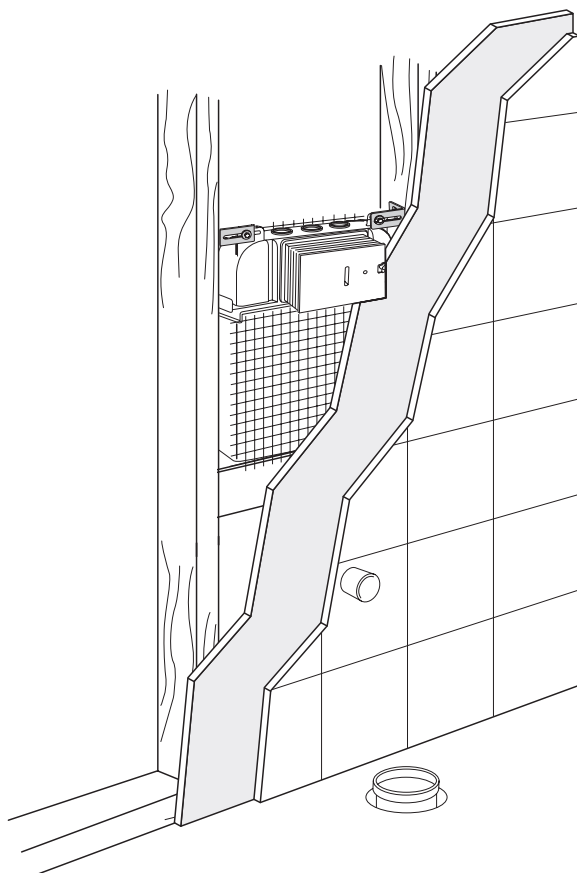


# INSTALLATION INSTRUCTIONS

- 1 Cut the pan connector down to the correct length and set it in place.

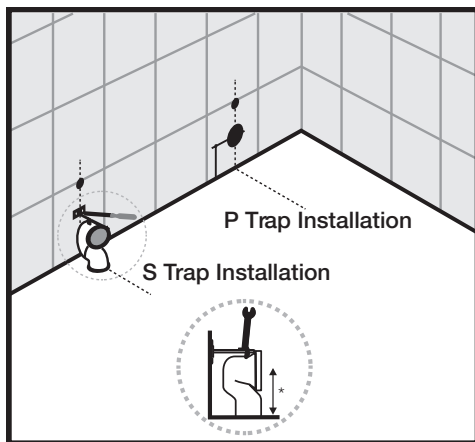


- 2 Fasten the two fixing brackets to the floor and ensure that they will line up with the fixing holes on the side of the toilet pan.

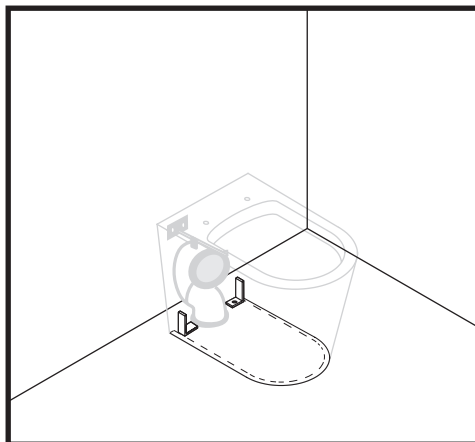


**3** Install the flush pipe as shown below.




3a. Measure the correct length of the Horizontal Flush Pipe as follows:

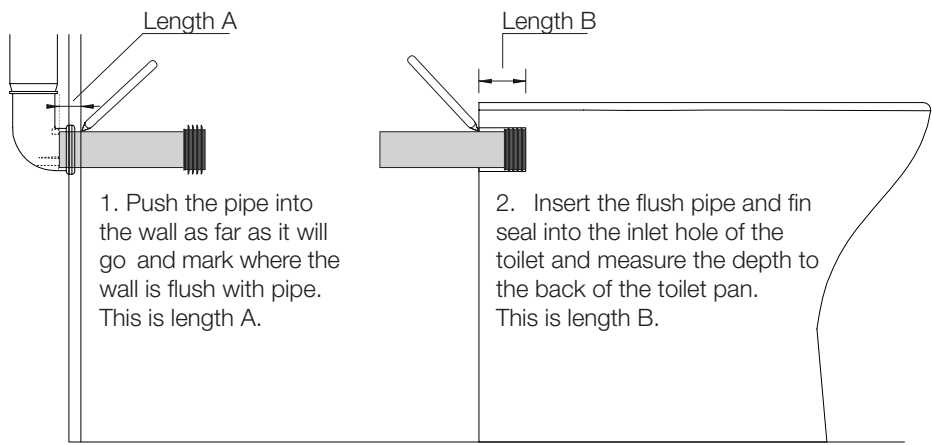


3. Length of Flush Pipe with Fin Seal Installed:

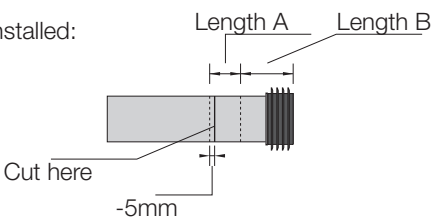


3b. Cut the pipe and chamfer the edge of the cut flush pipe.  
Apply lubricant to the fin seal to assist install.

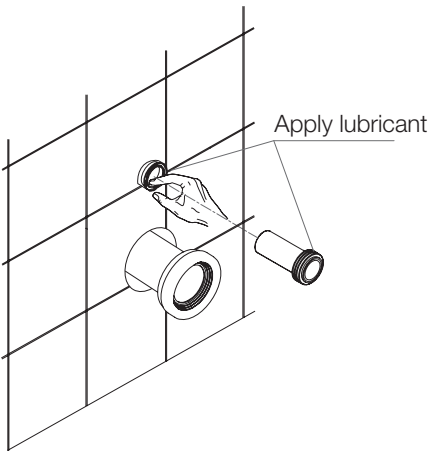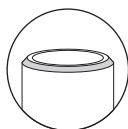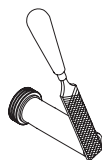


- 4 Push the flush pipe into the toilet pan, and pan connector as well if using a P Trap. Then push the toilet pan back against the wall, ensuring that the pipe connections are perfectly aligned. To make the connection easier, apply some lubricant to the pipes.

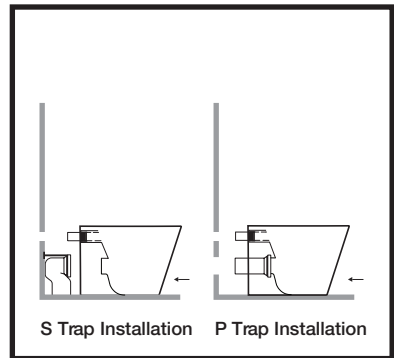

- 5 Use packers if necessary to ensure the toilet pan is sitting level and doesn't rock from side to side, then fasten the toilet pan to the fixing brackets. Apply a bead of silicon around the edge of the pan both on the wall and floor.

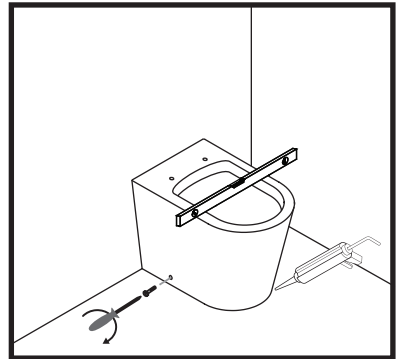

- 6 Install the toilet seat and test the toilet for performance.

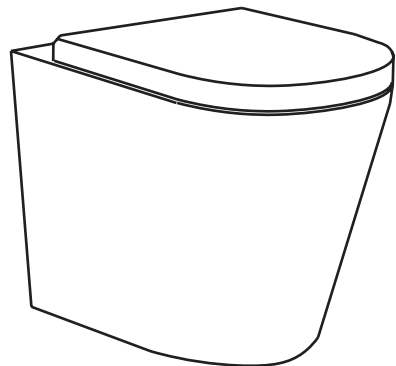

V 27.04.2023

Distributed by:

**Plumblin**

T 04 568 9898 E [sales@plumblin.co.nz](mailto:sales@plumblin.co.nz)  
[www.plumblin.co.nz](http://www.plumblin.co.nz)