
SLIDER REPAIRING & MAINTAINENCE



BUDDY SLIDE SHOWER | M308

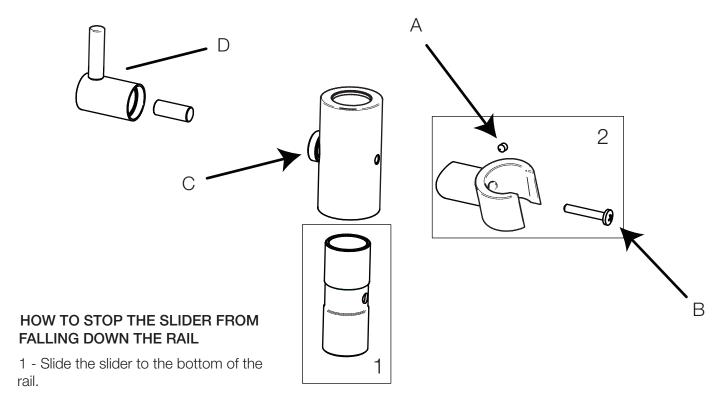

- 2 Loosen the handle (D) off the slider.
- 3 Tighten the brass nut (C), note this does not need to be to tight.
- 4 Screw the handle (D) back onto the brass nut (C).

REPLACEMENT PARTS

- A M4X4 grub screw (Code M4X4)
- B Centre draw bolt (Code M307-17)
- 1 Plastic slider insert (Code M307.013)
- 2 Handepiece holder, centre draw bolt & M4X4 grub screw (Code -M307-006.xx (xx - finish)

HOW TO TIGHTEN HANDSHOWER HOLDER

- 1 Loosen the locking grub screw (A) with an allen key.
- 2 Tighten the centre draw bolt (B)
- 3 Tighten the locking grub screw (A), this is to lock the draw bolt in place.

Distributed by:

