


INSTALLATION INSTRUCTIONS


VANITY TOPS

progetto
DESIGN COLLECTION


1 - Firstly, place the vanity top down on the vanity, and dry-fit the waste to ensure it aligns with the trap.

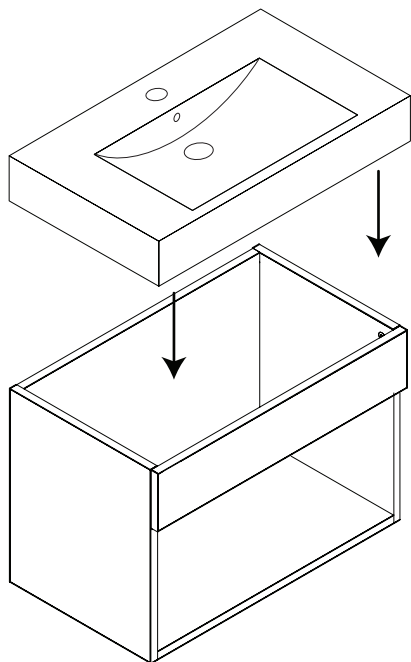


2 - Apply a very small bead of silicone along the top edge of the vanity.

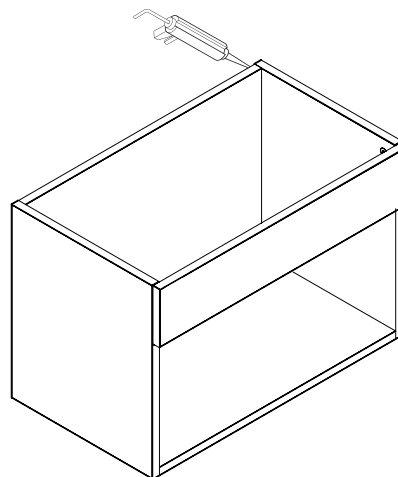

3 - Place the vanity top back down on the vanity and connect up the waste.

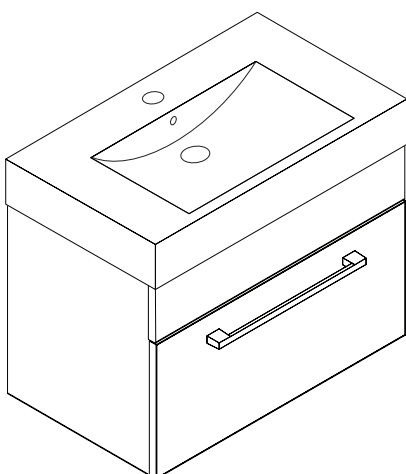

4 - Finally, apply a bead of silicone around the edge of the vanity.

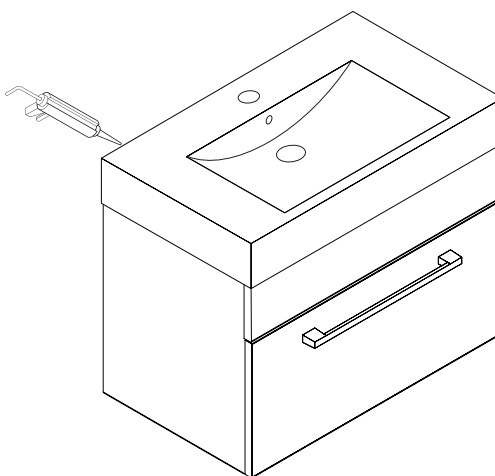

Distributed by:

Plumbline

T 04 568 9898 E sales@plumblin.co.nz
www.plumblin.co.nz