
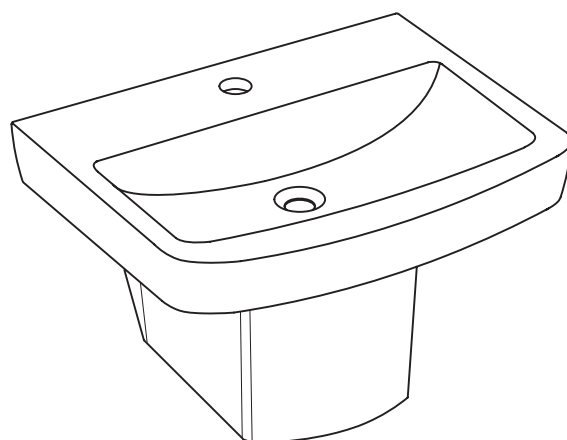


INSTALLATION INSTRUCTIONS

BASIN WITH PEDESTAL

BASIN WITH SHROUD

progetto
DESIGN COLLECTION

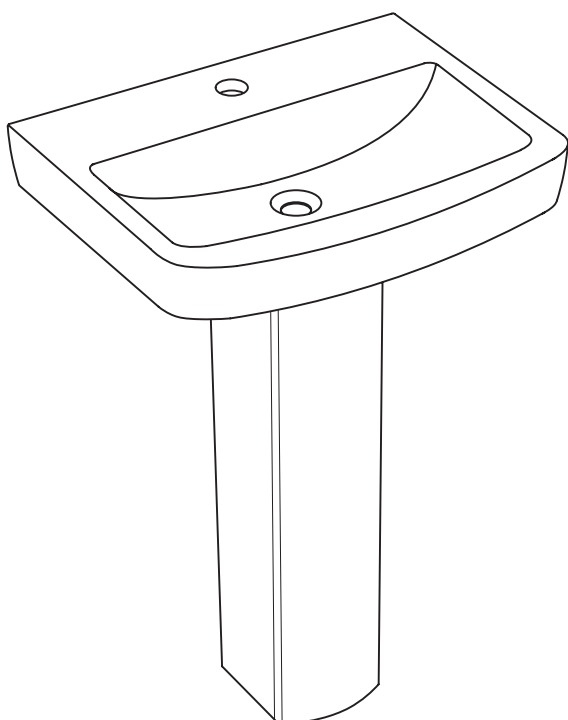

IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:


Plumblin

Exceptional Bathrooms.
Exceptional Choice.

T 04 568 9898 E sales@plumblin.co.nz
www.plumblin.co.nz


Installation Instructions

⚠ Important! Before installing ensure there is sufficient timber framing in the wall to securely fasten your basin to. Please check the spec of the basin for the mounting details.

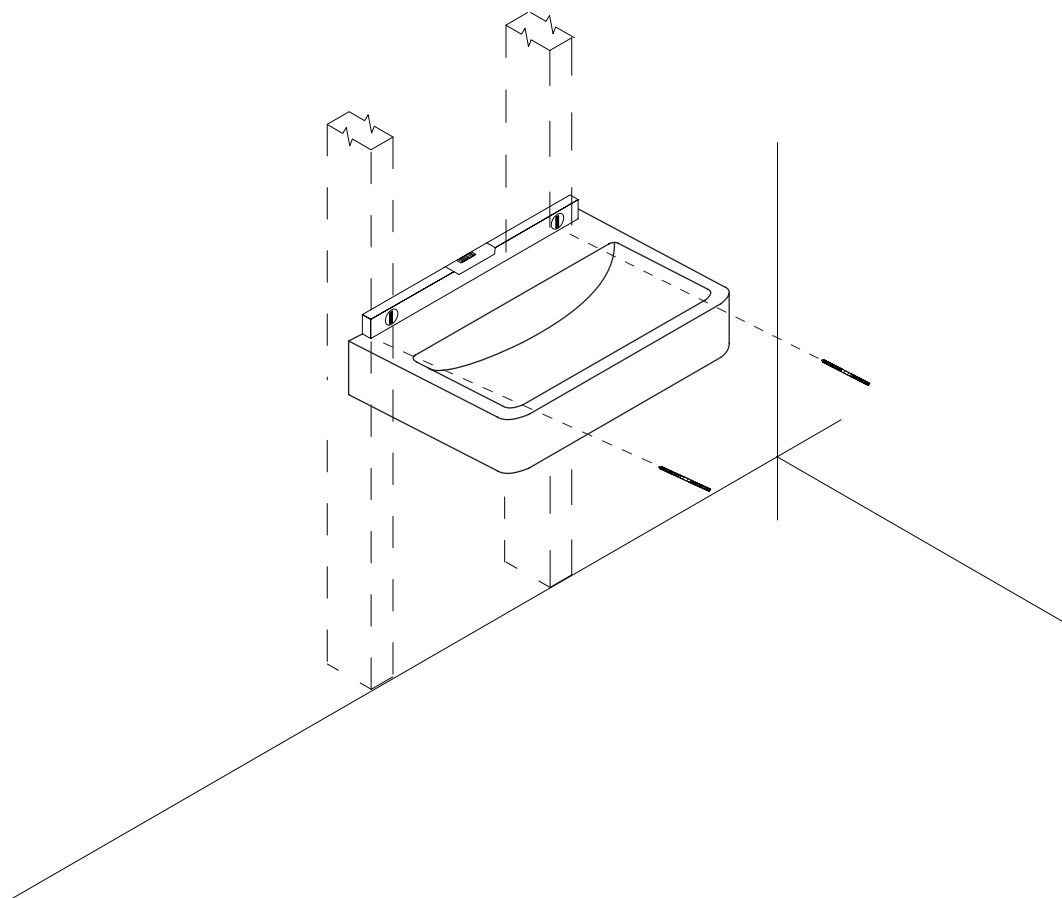

2

Bolt Set Supplied

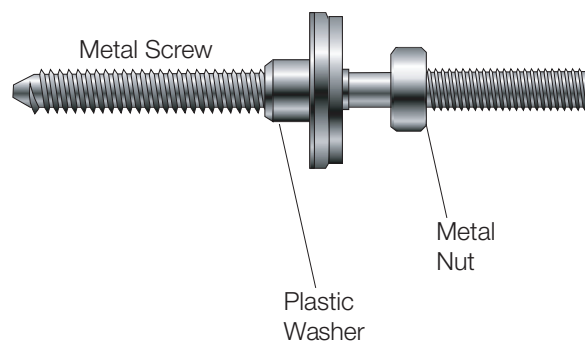


INSTALLATION INSTRUCTIONS


BASINS WITH PEDESTAL

progetto
DESIGN COLLECTION


1. Drill holes in the required positions into the timber framing using a 7mm drill bit.

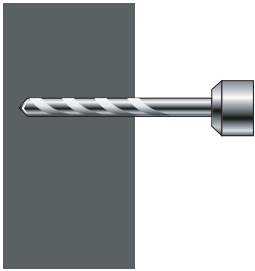

2. Screw a fixing bolt into each hole using an 8mm spanner to tighten. Tighten until the spanner contacts the wall.

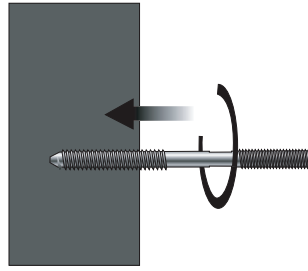


3. Place the basin down onto the pedestal.

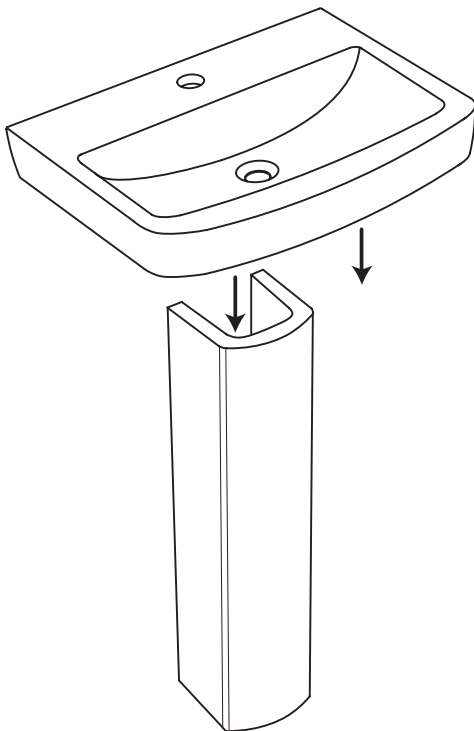


4. Push the basin and pedestal back against the wall and locate the fixing bolts with the fixing holes in the back of the basin.

Note - This step will require two installers.

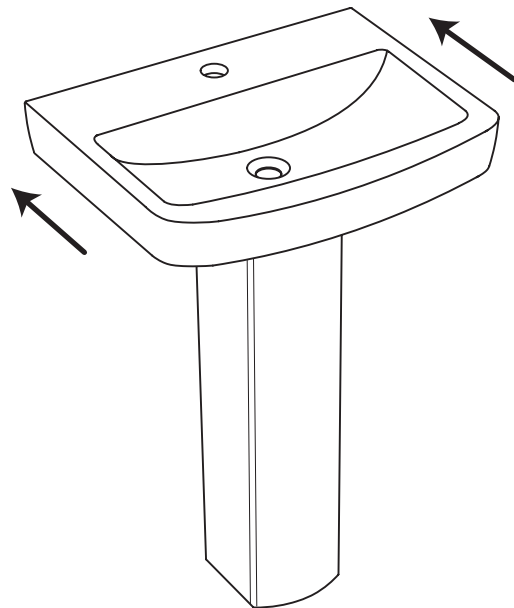


Installation Instructions

5. Ensure that the basin is sitting level, then fix the basin in place with the washers and fixing nuts. Once fixed in place then connect up the waste.

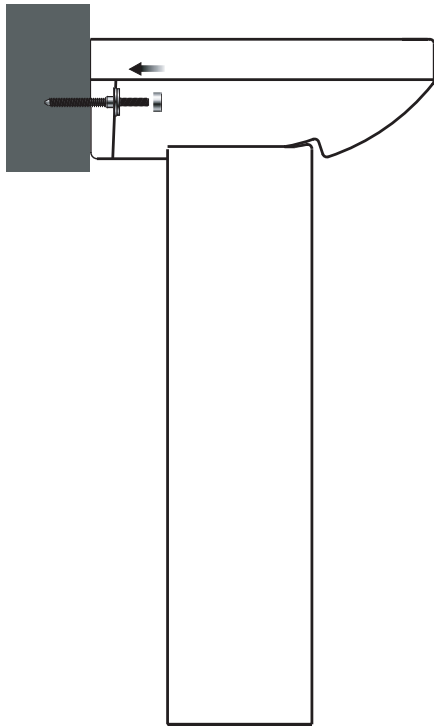

6. Apply a small bead of silicone around the back edge of the basin, around the base of the pedestal and where the basin sits on the pedestal. Finally fit the basin with the chosen tapware.

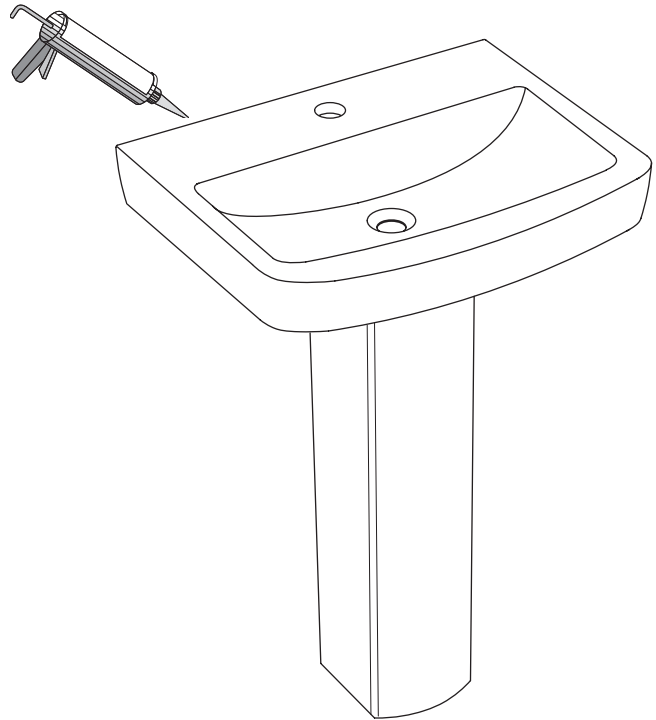


INSTALLATION INSTRUCTIONS


BASINS WITH SHROUD

progetto
DESIGN COLLECTION


1. Drill holes in the required positions into the timber framing using a 7mm drill bit.

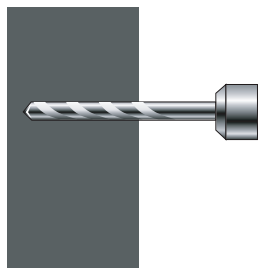


2. Screw a fixing bolt into each hole using an 8mm spanner to tighten. Tighten until the spanner contacts the wall.

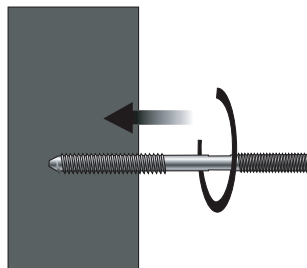

3. Fix the basin in place with the washers and fixing nuts ensuring it is level. Once fixed in place then connect up the waste and tapware.

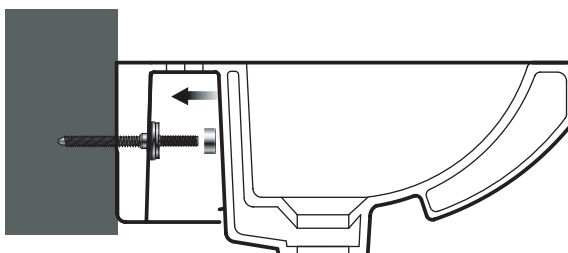

4. Fix the shroud under the basin back to the wall ensuring that the screws are fixed into solid framing. Then apply a bead of silicone around the edge of the basin.

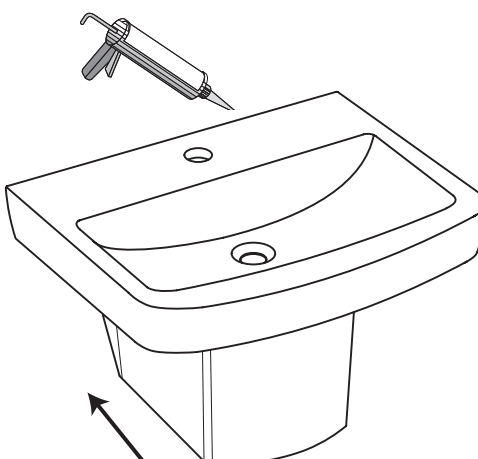

V 3/11/2023

Distributed by:

Plumblīne

Exceptional Bathrooms.
Exceptional Choice.

T 04 568 9898 E sales@plumblīne.co.nz
www.plumblīne.co.nz