


INSTALLATION INSTRUCTIONS

SEMI RECESSED BASINS

progetto
DESIGN COLLECTION

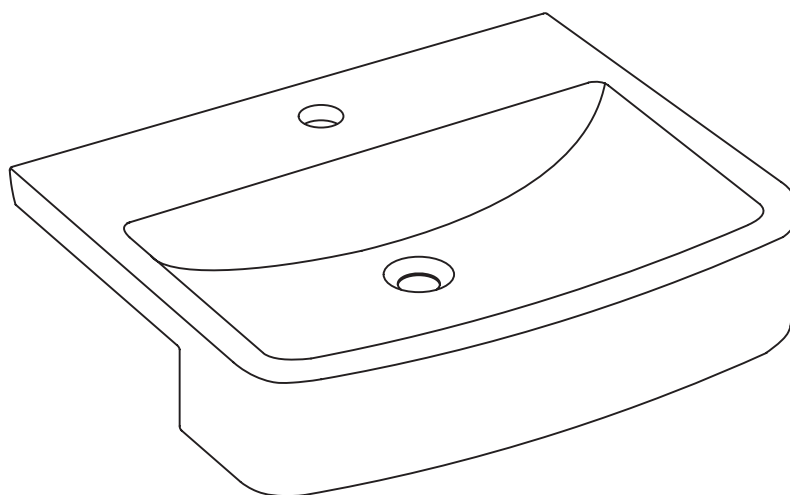

Distributed by:


Plumblíne

T 04 568 9898 E sales@plumblíne.co.nz
www.plumblíne.co.nz


INSTALLATION INSTRUCTIONS

SEMI RECESSED BASINS

1 - Firstly, cut out the vanity top to suit the chosen semi-recessed basin.

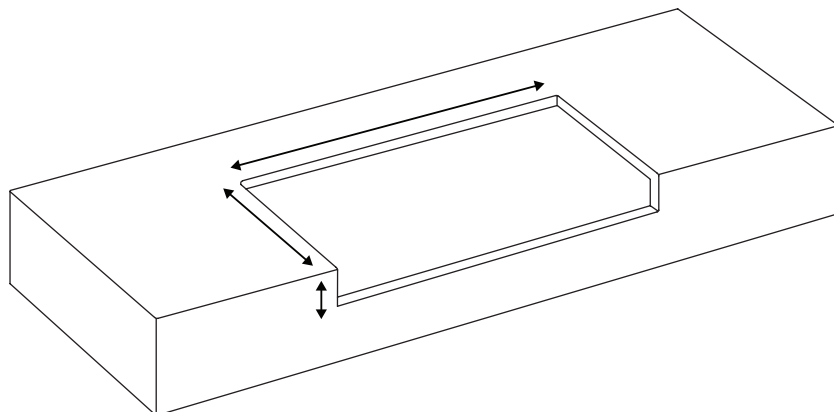

2 - Apply a bead of silicone around the entire edge of the basin.

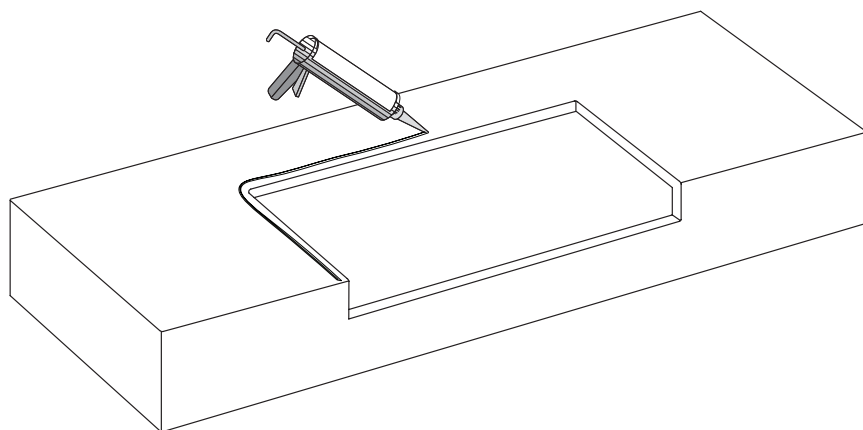

3 - Sit the basin down in place, then finally connect up the waste and tapware.

