


INSTALLATION INSTRUCTIONS


COUNTER TOP BASINS

progetto
DESIGN COLLECTION


1 - Firstly, ensure the cutout of the vanity top allows enough room for the waste and tapware.

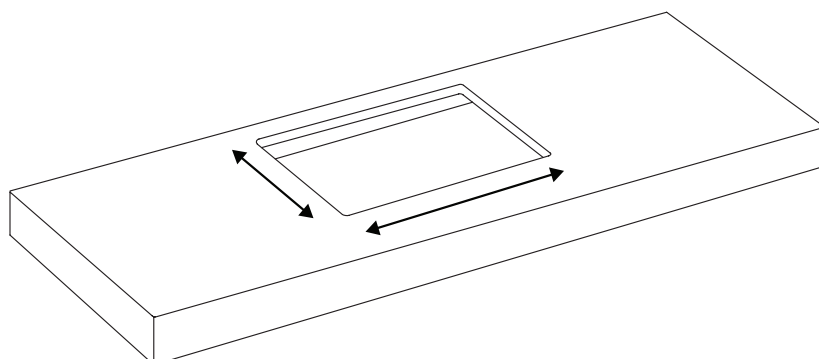

2 - Apply a bead of silicone where the counter top basin will sit.

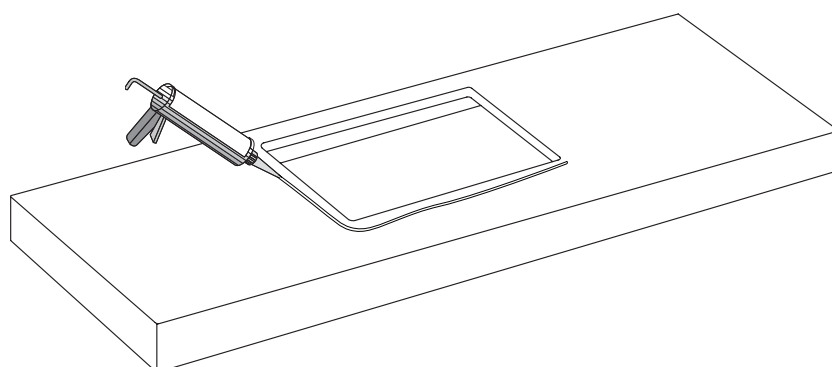

3 - Sit the basin in place and apply silicone where around the edge of the basin. Finally, fit the basin with the chosen waste and tapware.

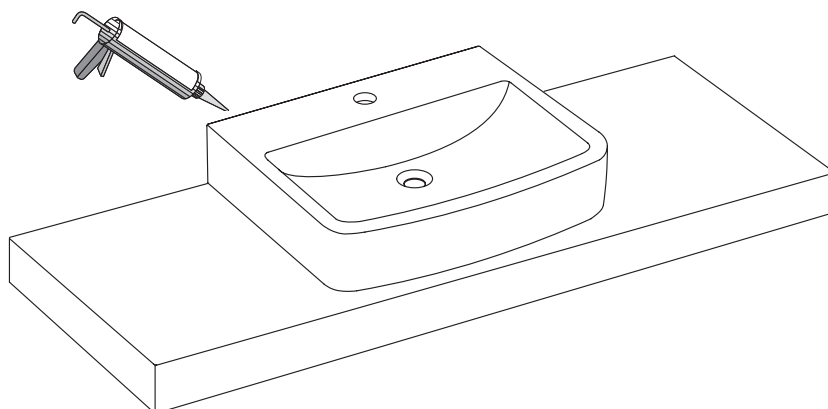

Distributed by:

Plumblīne

T 04 568 9898 E sales@plumblīne.co.nz
www.plumblīne.co.nz