
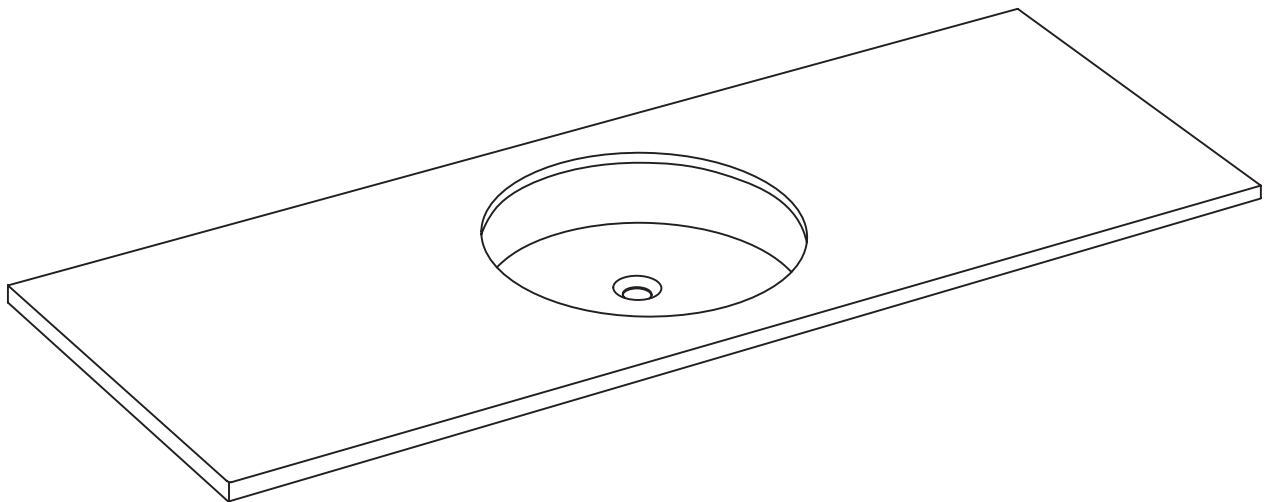


INSTALLATION INSTRUCTIONS

UNDERMOUNT BASIN WITH BRACKETS

progetto
DESIGN COLLECTION

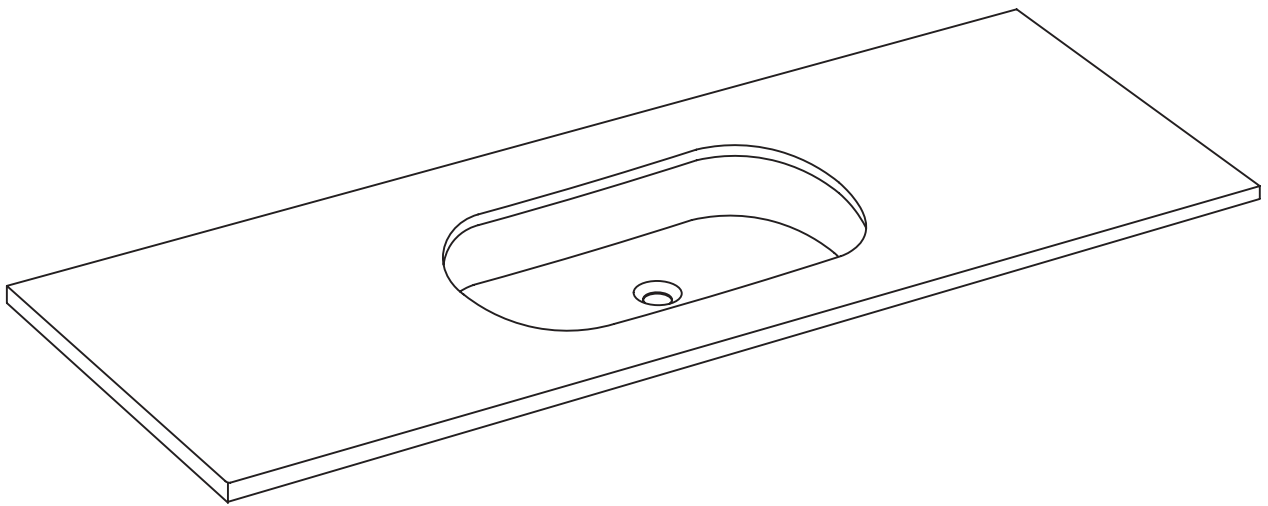

Distributed by:


Plumblīne

T 04 568 9898 E sales@plumblīne.co.nz
www.plumblīne.co.nz


INSTALLATION INSTRUCTIONS

UNDERMOUNT BASIN WITH BRACKETS

1 - Firstly, cut the vanity top out to ensure it suits the chosen basin prior to installing the vanity top.

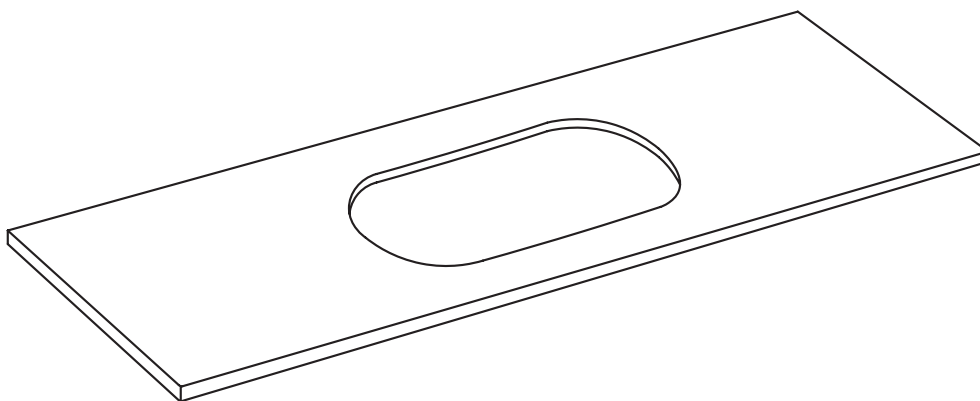

2 - Using MS adhesive, glue a wooden mounting block (not supplied) to the underside of the vanity top for each bracket to fasten onto.

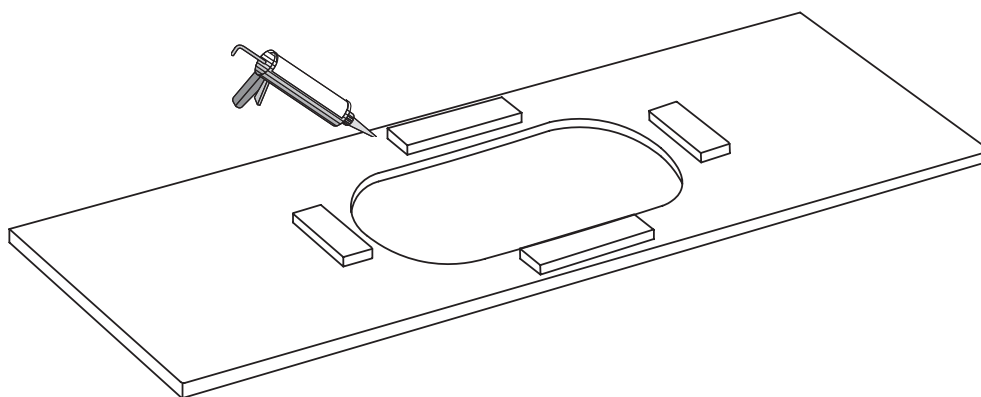


INSTALLATION INSTRUCTIONS


UNDERMOUNT BASIN WITH BRACKETS

3 - Place the basin down on the vanity top in the correct position. Then using the brackets fasten the basin to the vanity top.

Please Note: In order to sit the basin in the desired position this may require packers between the basin and brackets.

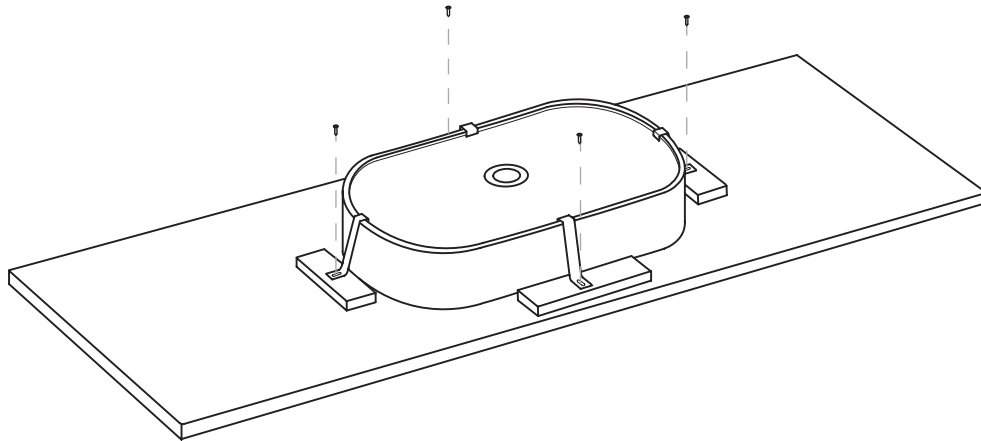

4 - Once the vanity top has been installed, apply a bead of silicone between the basin and vanity top, then fit the basin with the chosen waste and trap.

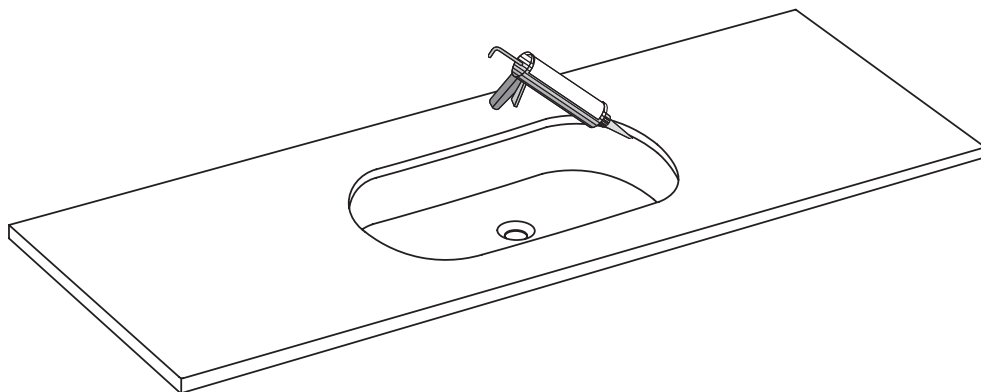

V. 15/11/2023

Distributed by:

Plumblīne

T 04 568 9898 E sales@plumblīne.co.nz
www.plumblīne.co.nz