


INSTALLATION INSTRUCTIONS

UNDERMOUNT BASINS WITH NO BRACKETS

progetto
DESIGN COLLECTION

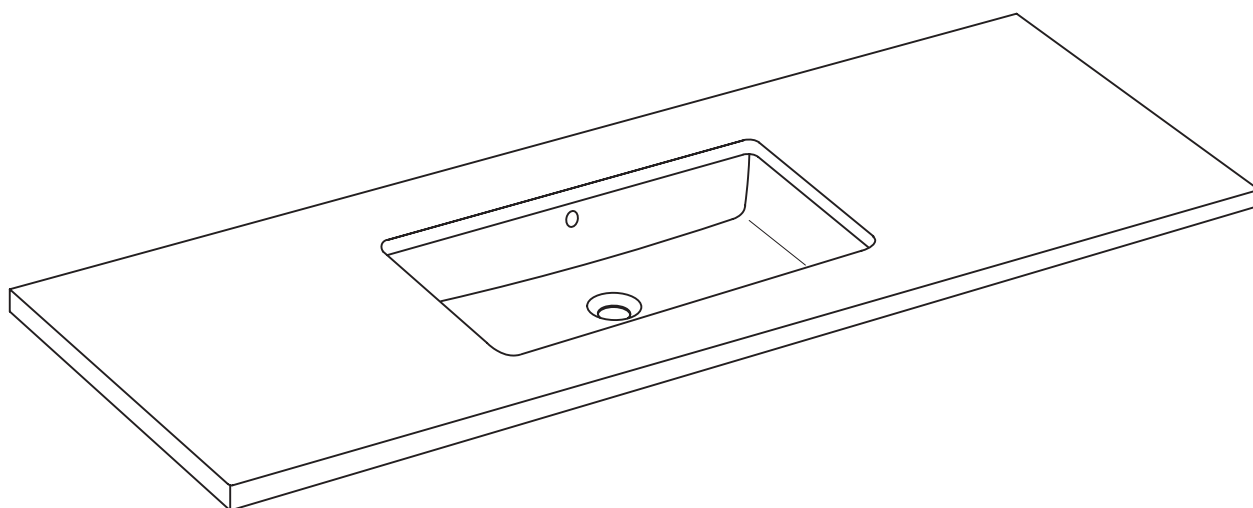

Distributed by:


Plumblīne

T 04 568 9898 E sales@plumblīne.co.nz
www.plumblīne.co.nz


INSTALLATION INSTRUCTIONS

UNDERMOUNT BASINS WITH NO BRACKETS


1 - Firstly, cut the vanity top out to ensure it suits the chosen basin prior to installing the vanity top.

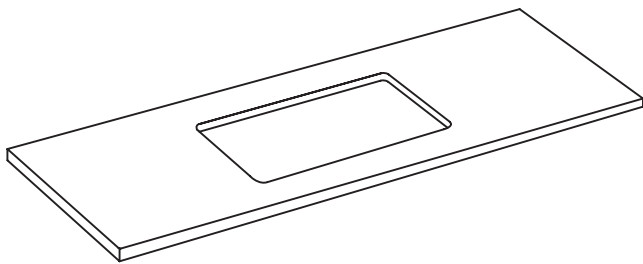

2 - Apply a large bead of MS Adhesive around the underside of the vanity top.

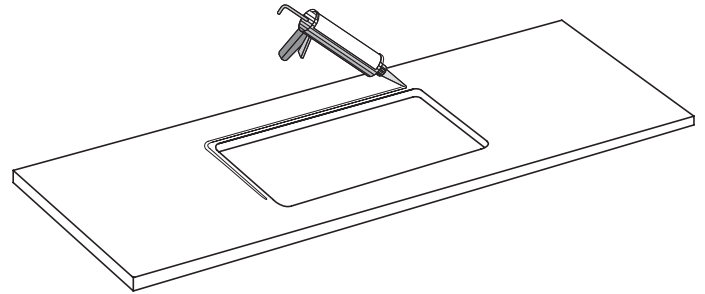

3 - Place the basin down on the vanity top in the correct position. Then leave the basin in place until the MS Adhesive fully dries.

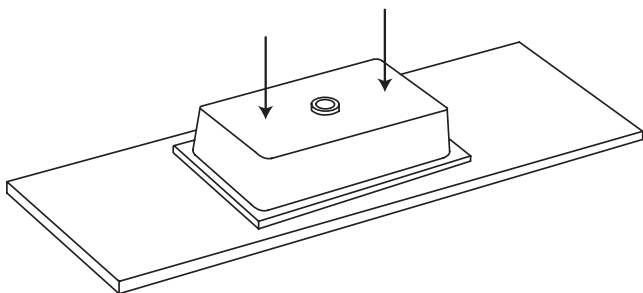

4 - Once the MS Adhesive has fully cured, install the vanity top and fit off the basin with the chosen waste and trap. Then apply a bead of silicone on the inside to seal between the basin and vanity top.

