

INSTALLATION INSTRUCTIONS

REGAL BASIN TAPS PAIR | 1417K

OFFICINA
NICOLAZZI
DAL 1960





1 - Place the hot tap down into the left taphole, ensuring the seal is sitting between the bench and the base of the tap.

2 - Push the rubber then metal washer up to the underside of the bench and then lock the tap in the correct orientation with the fixing nut.

3 - Connect a flexible hose (not supplied) from the hot water inlet to the hot water tap. Prior to this step, ensure the pipework has been flushed out.

4 - Repeat the steps above for the cold water tap and test them both for performance.

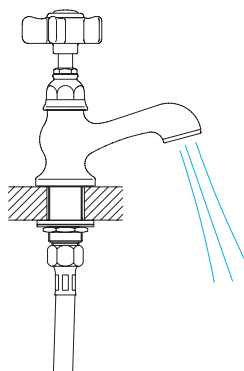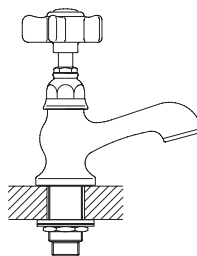

Distributed by:

Plumblīne

T 04 568 9898 E sales@plumblīne.co.nz
www.plumblīne.co.nz