

INSTALLATION INSTRUCTIONS

ECO STYLE SLIDE SHOWER | 786705

progetto
DESIGN COLLECTION



IMPORTANT!

Please read these instructions **prior** to installation

Distributed by:


Plumbline

T 04 568 9898 E sales@plumblin.co.nz
www.plumblin.co.nz

RECOMMENDATIONS FOR INSTALLATION




ATTENTION: Failure to follow these recommendations may void the warranty. It is recommended that a qualified, licensed tradesperson install this product.

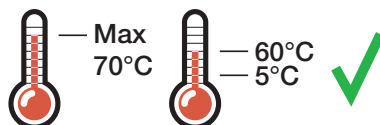

Water Pressure: 3 bar



Product performance cannot be guaranteed if pressure is less than 1 bar. Above 5 bar a pressure regulator must be installed. Failure to do so voids the product warranty.

Water Temperature: 5°- 65°C

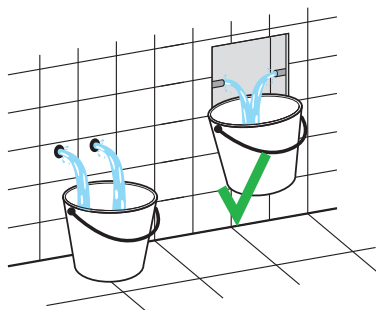

Pre-Flush

Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

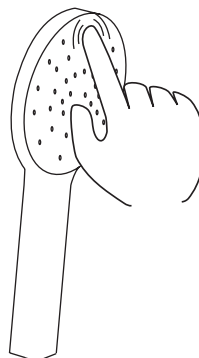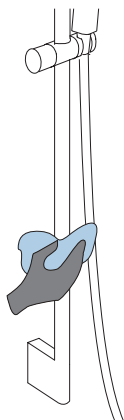


Cleaning

Clean with warm soapy water and a smooth cloth e.g. microfibre cloth. Avoid abrasive sponges or detergents as these will damage the finish.

Nozzle Maintenance

To remove calcium/lime build-up on the handpiece nozzles, periodically clean them by flicking them with your finger as shown.

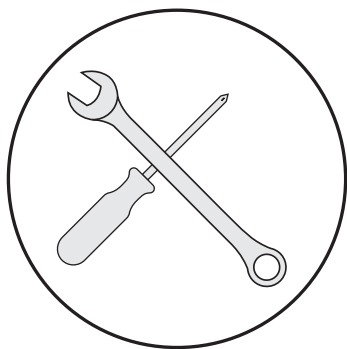

Warranty Information


For full details about our warranty visit
plumbline.co.nz/warranty-information

INSTALLATION INSTRUCTIONS




ATTENTION: Prior to installation remove all parts from the packaging and inspect all parts for any freight damage.


- 1 Before the wall lining has been installed, choose the position of the wall coupling. Position the 1/2 inch male wingback in the wall accordingly, ensuring that it is firmly fixed in place.

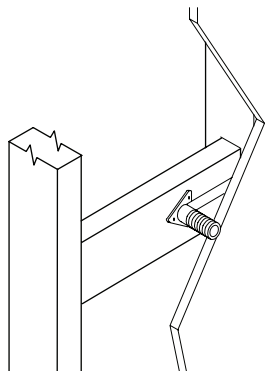


- 2 Ensure that there is sufficient framing inside the wall to fix the slide shower mount brackets to.

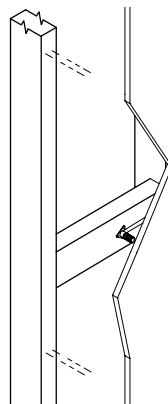

- 3 Mark out the fixings, use a level to check that they are plumb.




- 4 Insert the end fixing legs into the rail.




INSTALLATION INSTRUCTIONS

progetto


- 5 Fasten the rail back against the wall.



- 6 Slide the chrome covers over the two fixing legs.

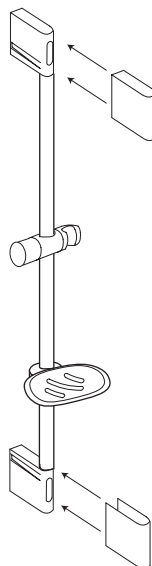

- 7 Slide the flange onto the wall coupling and screw the wall coupling in place ensuring the thread sealant has been applied and slide the flange back to the wall.

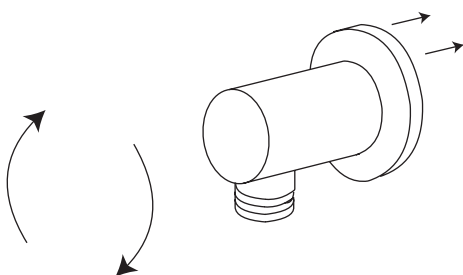

- 8 Finally, connect up the hose and handpiece.

