

INSTALLATION INSTRUCTIONS

ECO STYLE SWIVEL WALL MOUNT BATH SPOUT | 37BS-SW



Distributed by:

Plumblīne


T 04 568 9898 E sales@plumblīne.co.nz
www.plumblīne.co.nz

INSTALLATION INSTRUCTIONS

ECO STYLE SWIVEL WALL MOUNT BATH SPOUT | 37BS-SW


1

Firstly, slide the flange forward onto the spout assembly.

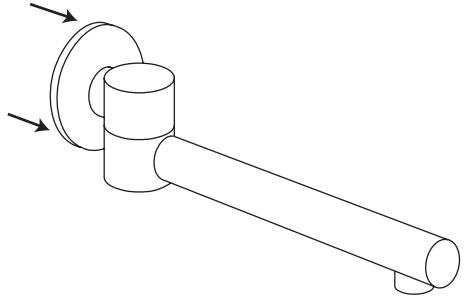


2

Apply thread sealant to the threaded wingback and fix the spout in place.

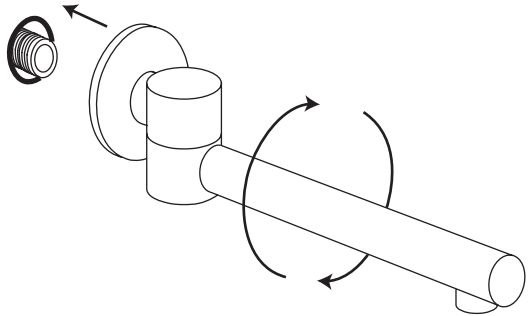

3

Apply a bead of silicone around the back of the flange and push it back to the wall. Finally, test for performance.

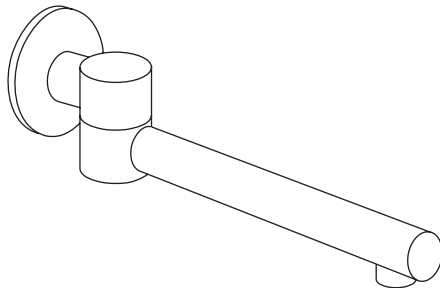

V 5/12/2023

Distributed by:

Plumbl ine

T 04 568 9898 E sales@plumbl ine.co.nz
www.plumbl ine.co.nz