



INSTALLATION INSTRUCTIONS

progetto
DESIGN COLLECTION


OLI 316 CEILING/WALL MOUNT RAINHEAD



1 - Firstly, sit the flange in place, then apply thread sealant to the thread.

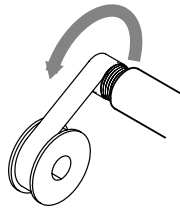

2 - Fasten the ceiling arm into the wingback and apply a bead of silicone to seal off around the flange.

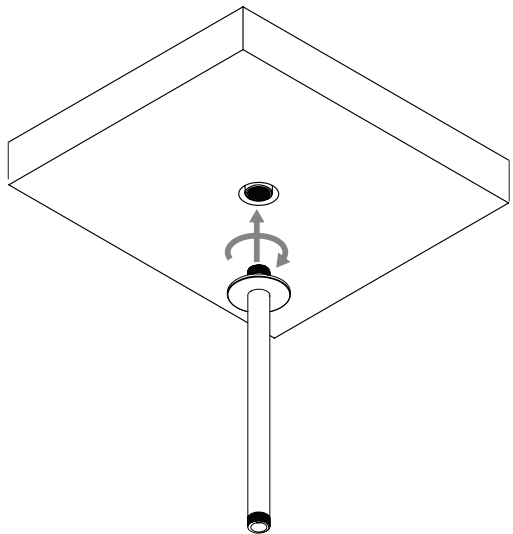

Distributed by:

Plumbline


T 04 568 9898 E sales@plumblin.co.nz
www.plumblin.co.nz

INSTALLATION INSTRUCTIONS


progetto
DESIGN COLLECTION

OLI 316 CEILING/WALL MOUNT RAINHEAD

3 - Insert the washer into the rainhead then screw it in place.

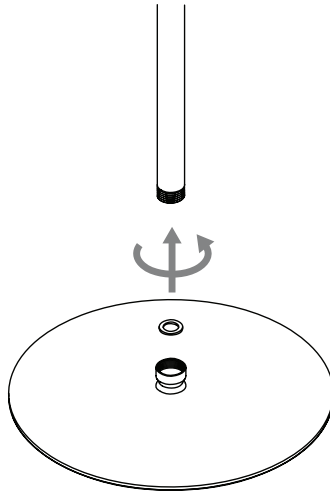

4 - Finally, test for performance.


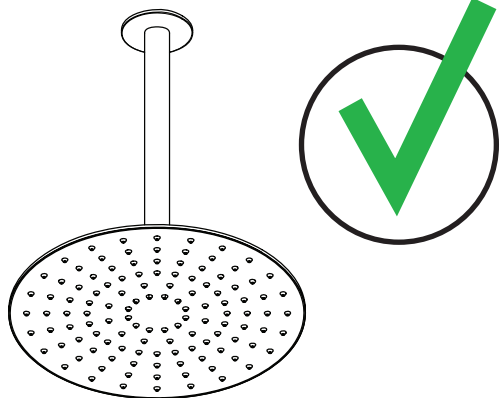


INSTALLATION INSTRUCTIONS


progetto
DESIGN COLLECTION

OLI 316 CEILING/WALL MOUNT RAINHEAD

1 - Firstly, sit the flange in place, then apply thread sealant to the thread.

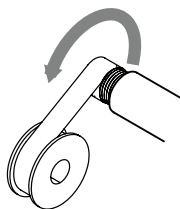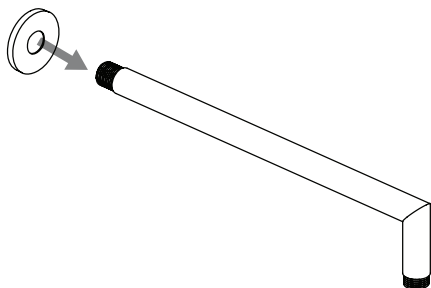

2 - Secondly, fasten the wall arm into the wingback and apply a bead of silicone to prevent moisture from entering the wall cavity.

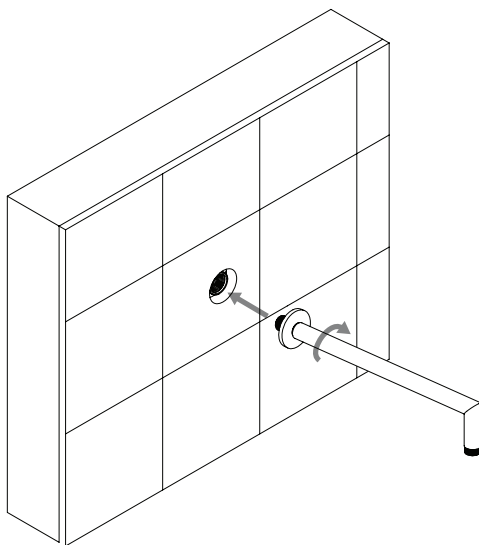


INSTALLATION INSTRUCTIONS


progetto
DESIGN COLLECTION

OLI 316 CEILING/WALL MOUNT RAINHEAD

3 - Insert the washer into the rainhead then screw it in place.

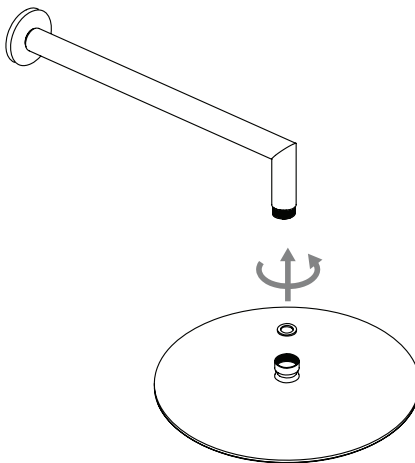

4 - Finally, test for performance.

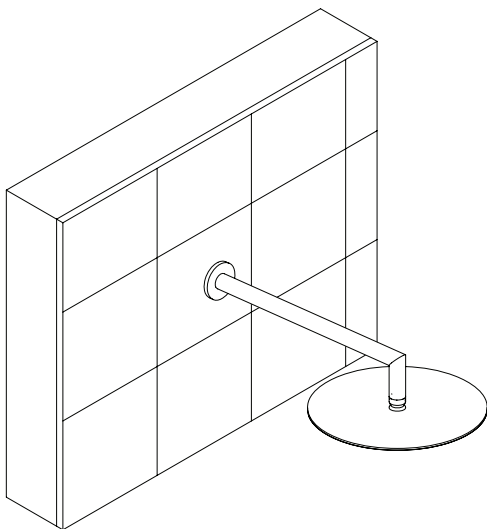

V 15/01/2024

Distributed by:

Plumbline

T 04 568 9898 E sales@plumblin.co.nz
www.plumblin.co.nz